

FEET

FORMULA EIGHT TRUGGY


1/8 NITRO PRO
TRUGGY KIT

 **SPARKO**
WWW.SPARKORACING.COM




INSTRUCTION
MANUAL

TOOLS / MISCELLANEOUS (NOT INCLUDED)




Hex Wrenches(1.5mm / 2.0mm / 2.5mm)




Needle Nose Pliers




Glass or Vinyl Tape



Box Wrench(5.5mm / 7mm / 10mm)

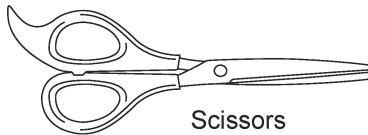

Scissors



Hobby Knife

OPERATION GUIDE



Assemble both left and right sides



Assemble Front and Rear



Assemble for 2 sets



Thread Lock



Grease



Pure Silicone Oil

SAFETY PRECAUTIONS

The SPARKO F8T is a high performance radio control model which needs to be operated with caution and common sense.

The F8T Kit is not intended for children under the age of 14 without adult supervision.

SPARKO shall not be held liable for any loss or damages, whether direct, indirect, act of nature, arising from the abuse or misuse of this product or any other product required while operating this model.

- Always keep your nitro fuel in a cool area and never use near flame, sparks, or while smoking.
- Always run your model in a well ventilated area outdoors. Never run your model indoors.
- This model is controlled by your radio controller and is sometimes vulnerable to interference from many outside sources. This interference can cause a loss of control so it is necessary to operate this model in an open area to avoid personal, or property damage. Always ensure turning on your radio first.
- Keep all the parts included in the package out of reach of children.
- This model contains many fast rotating parts. Never touch them during operation.
- Follow the instructions included with your radio gear.
- Never operate your model near people or property. The speed of this model has the potential to injure people and or damage property.
- Always use original SPARKO spare parts and option parts.
- Always ensure that the truggy is in proper working condition before use.

INDEX

BAG A	Manual, Stickers and Body Shell Parts	1
BAG B	Included Items	1
BAG C	Front / Rear and Diff. Sets	2
	Center Differential Set	3
BAG D	Front Gear Box	4
	Rear Gear Box	5
BAG E	Front Lower Arms	5~6
	Front Sway Bar	6~7
BAG F	Front Upper Arms	7~8
BAG G	Front Caster/Steering Blocks	8~9
BAG H	Servo Saver	10
BAG I	Rear Arms	11
	Raer Sway Bar	12~13
BAG J	Rear Hubs / Upper Arm Linkage Sets	13~15
	Tall Wing Mount	15
	Tires	31
BAG K	Center Diff. Mount	16
BAG L	Chassis	17~18
BAG M	Receiver Box	19~20
BAG N	Steering Linkage Sets	21
	Steering Servo Horn Set	22~23
BAG O	Fuel Tank	23~24
BAG P	Engine	24~25
BAG Q	Throttle Servo Horn Set	26
BAG R	Front / Rear Shocks	27~28
BAG S	Air Filter Set	29
BAG T	Wing / Tire	30
FACTORY SETUP SHEET		31
SETUP SHEET		32~34
SPARE PART LIST		35
UNIVERSAL PART LIST		36

BAG A



1023
Antenna Tube Set x 1



SS0303BK
Set Screw M3x3mm x 1



SB0308BK
Ball Screw M3x8mm x1



5001
Body Clip x 4



9005-BK
Wing Sticker-Black and White



9004-BK
Body Sticker-Black and White




9016-BK
F8T model number sticker


BAG B




L Shape Hex wrench

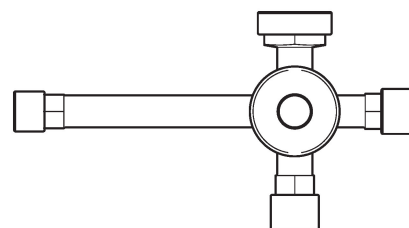


Glow plug wrench




Grease



Silicone Oil



Silicone Oil



Silicone Oil

BAG C

5021
Pin M2.2x9.8mm x 4

2001
Differential O-Rings x 4



WO051230
Differential Shim
5x12x0.3mm x 4

BO081605
Ball Bearing
8x16x5mm x 4

SF0310BK
Flat Screw M3x10mm x 8

5020
Differential Cross Pins x 4

WO0351020
Differential Shim
3.5x10x0.2mm x 8

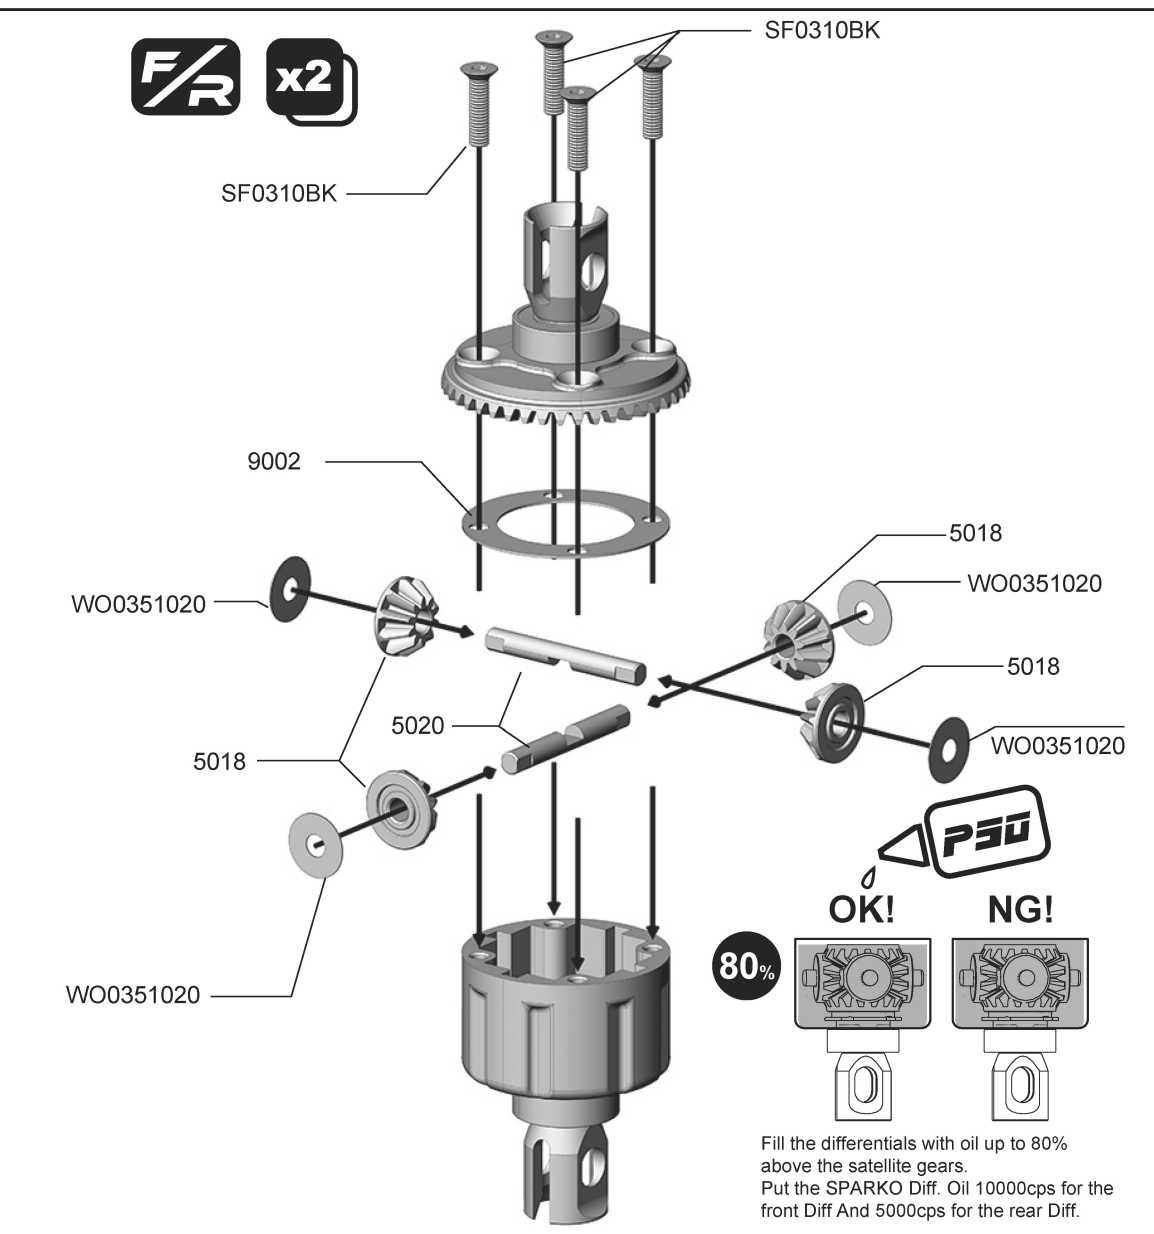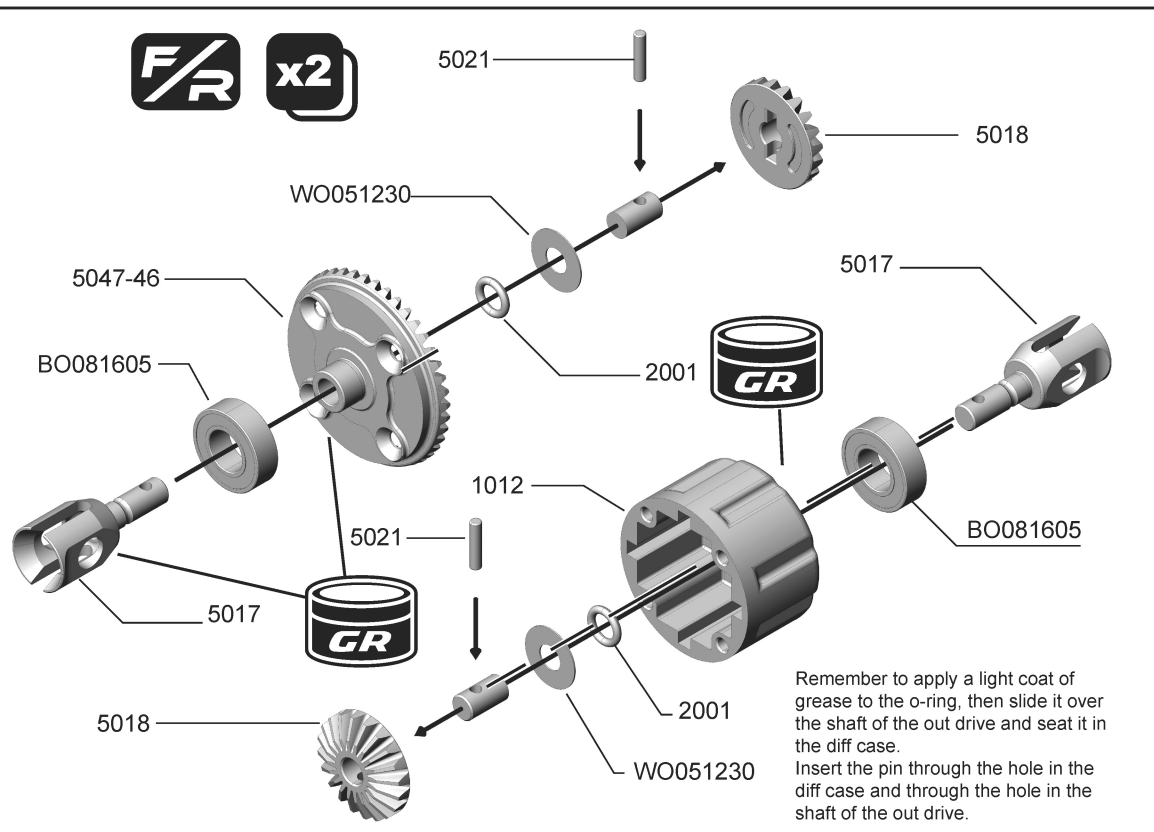

BAG C

5021
Pin M2.2x9.8mm x 2

2001
Differential O-Rings x 2

BO081605
Ball Bearing 8x16x5mm x 2


WO051230
Differential Shim 5x12x0.3mm x2

SF0312BK
Flat Screw M3x12mm x 4

5020
Differential Cross Pins x 2



WO0351020
Differential Shim 3.5x10x0.2mm x 4

3

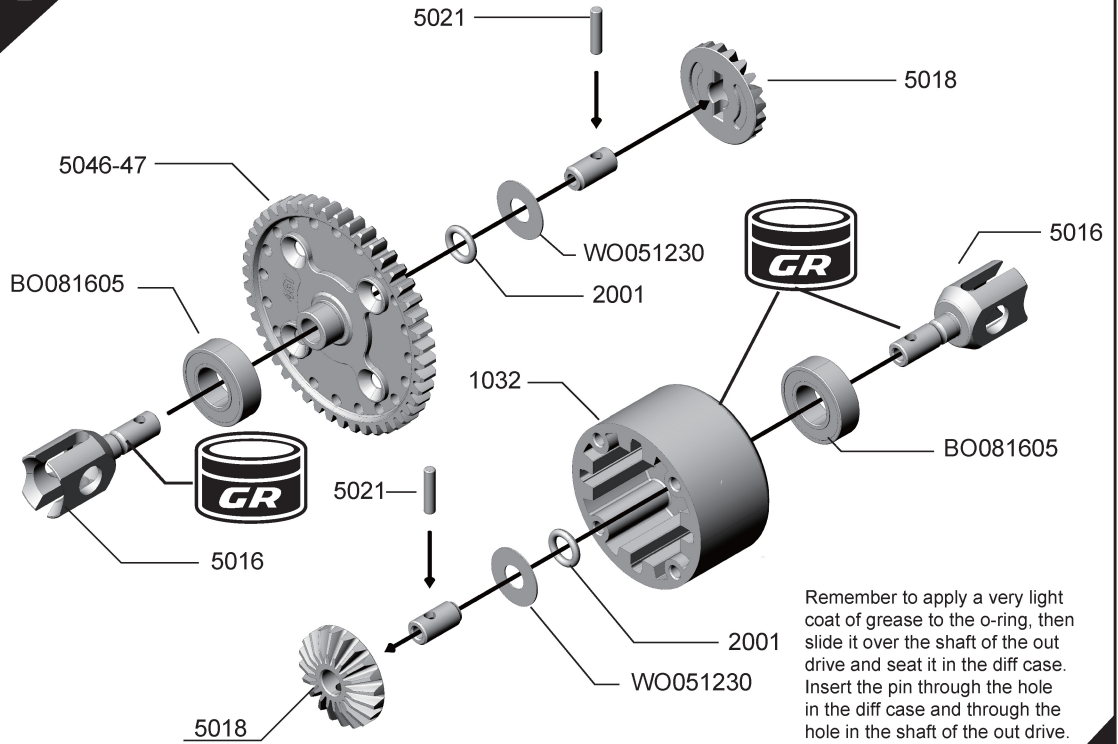

Remember to apply a very light coat of grease to the o-ring, then slide it over the shaft of the out drive and seat it in the diff case. Insert the pin through the hole in the diff case and through the hole in the shaft of the out drive.

4

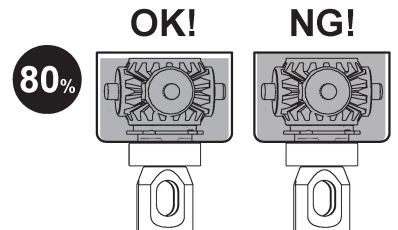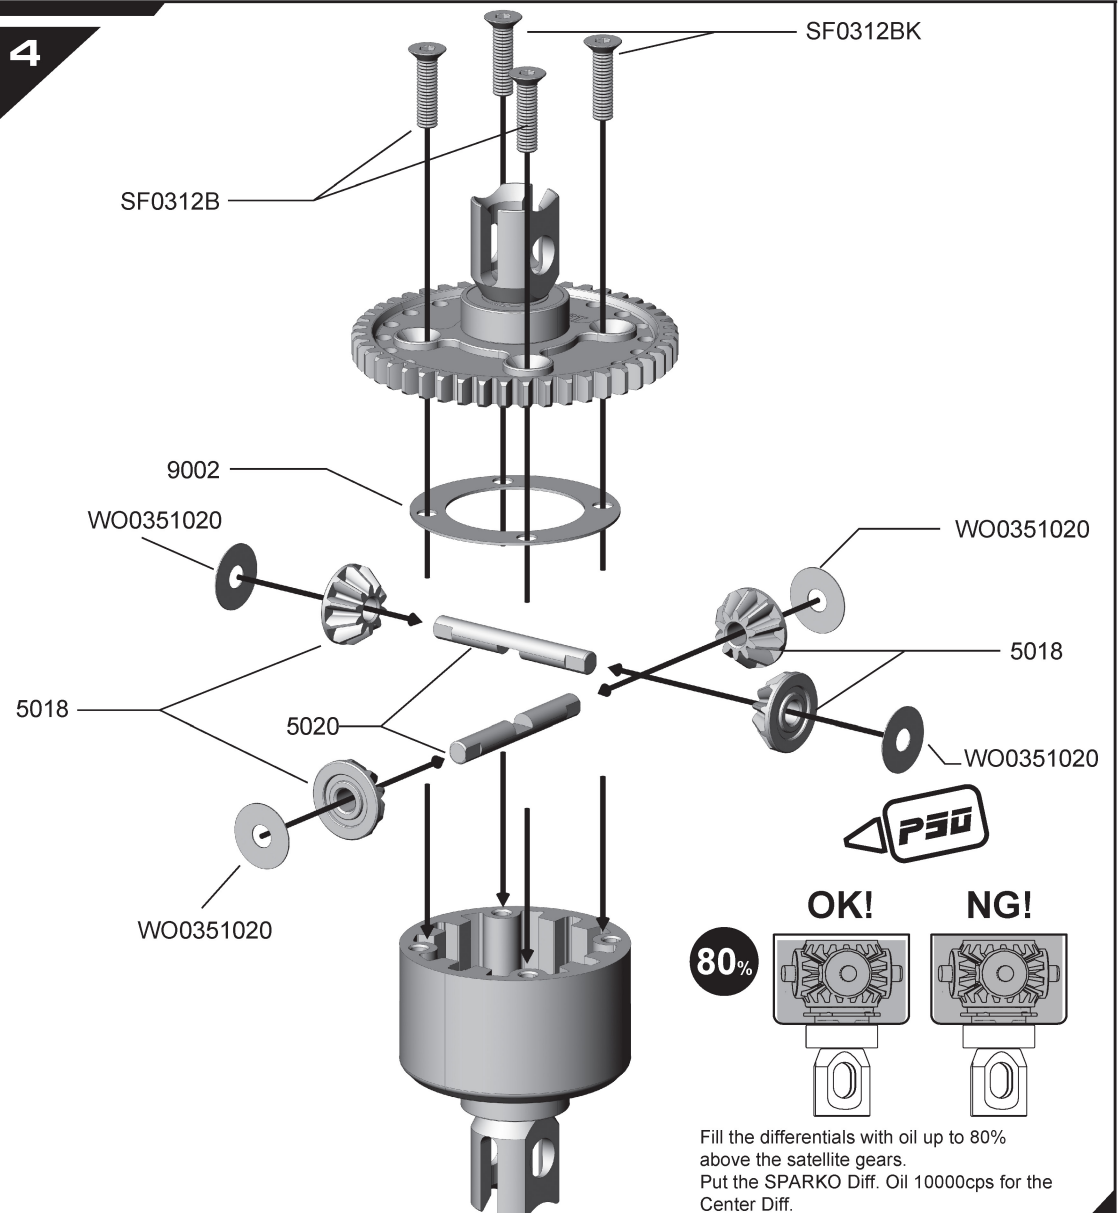

Fill the differentials with oil up to 80% above the satellite gears. Put the SPARKO Diff. Oil 10000cps for the Center Diff.

FRONT



SS0504BK
Set Screw M5x4mm x1



SF0314BK
Flat Screw M3x14mm x 2



BO051304
Ball Bearing 5x13x4 x2





WO131620
Differential Shim
13x16x.2mm x 8




4016
Pinion Gear Stopper
5x7x5.1mm x 1



SB0312BK
Ball Screw M3x12mm x 2

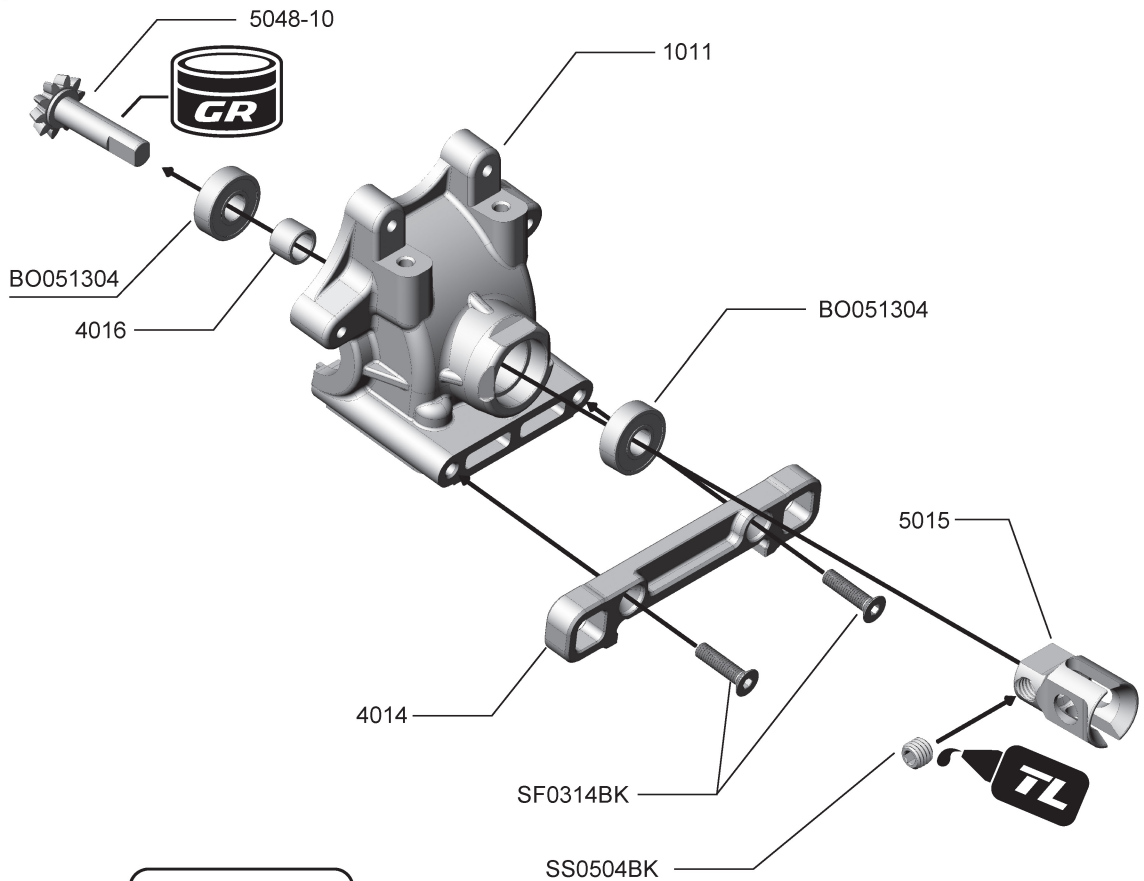

 Keep part 1011 (Sway Bar Cover) for next step

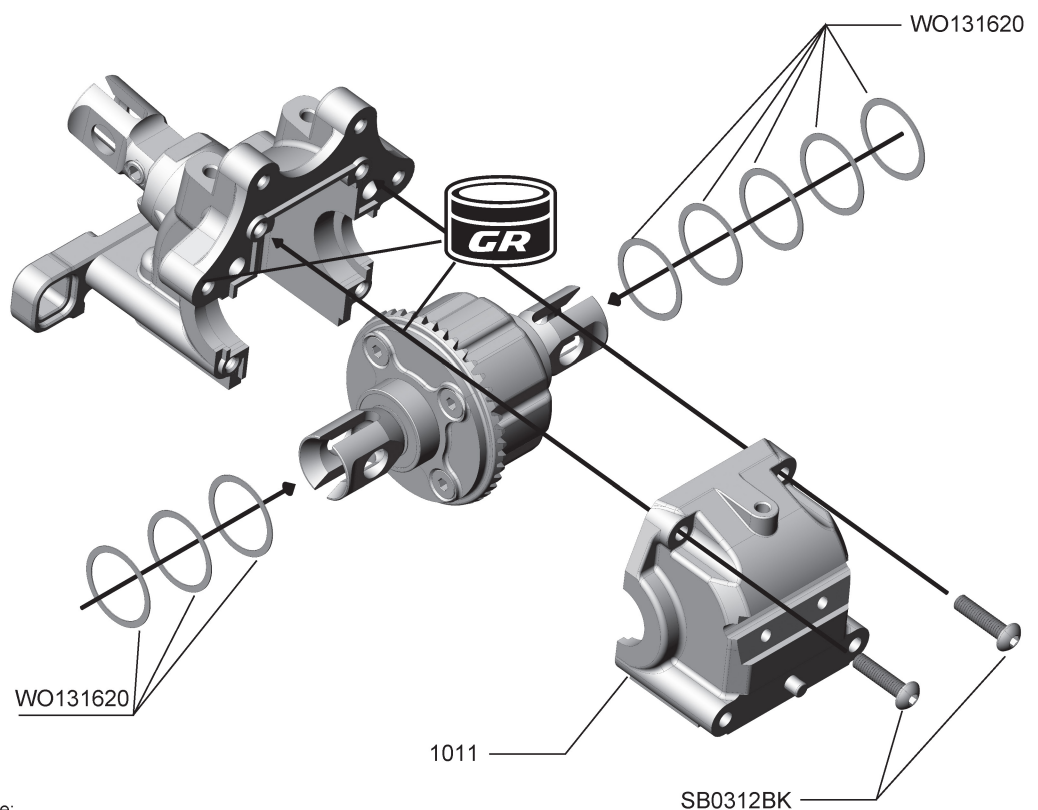

Note: SB0312BK —
Please use WO131620 13x16x0.2mm shims to adjust the space between the crown gear and pinion gear.
Standard suggestion is 3 pcs shim on the diff crown gear side and 5 pcs on the other side.

BAG D




SS0504BK
Set Screw M5x4mm x 1



SF0314BK
Flat Screw M3x14mm x 2



BO051304
Ball Bearing 5x13x4mm x 2

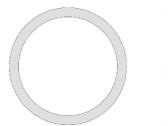

WO131620
Differential Shim
13x16x0.2mm x 8




4016
Pinion Gear Stopper
5x7x5.1mm x 1



SB0312BK
Ball Screw M3x12mm x 2

6

REAR

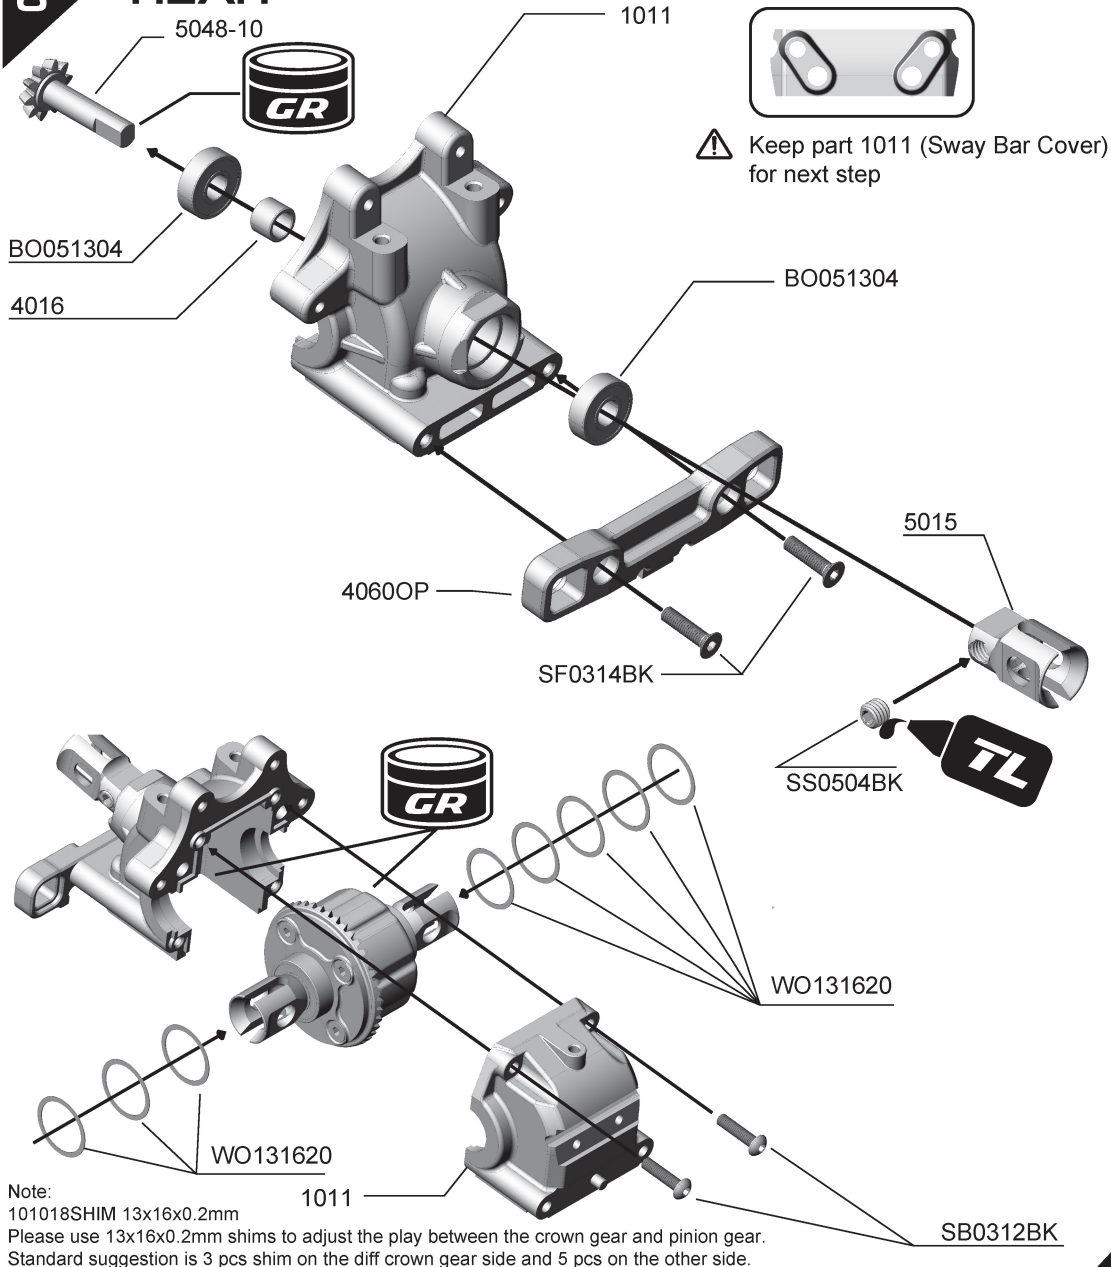

BAG E



SB0316BK
Ball Screw M3x16mm x 2




5043
Down Stop Screw M4x10mm x 2

7



x2

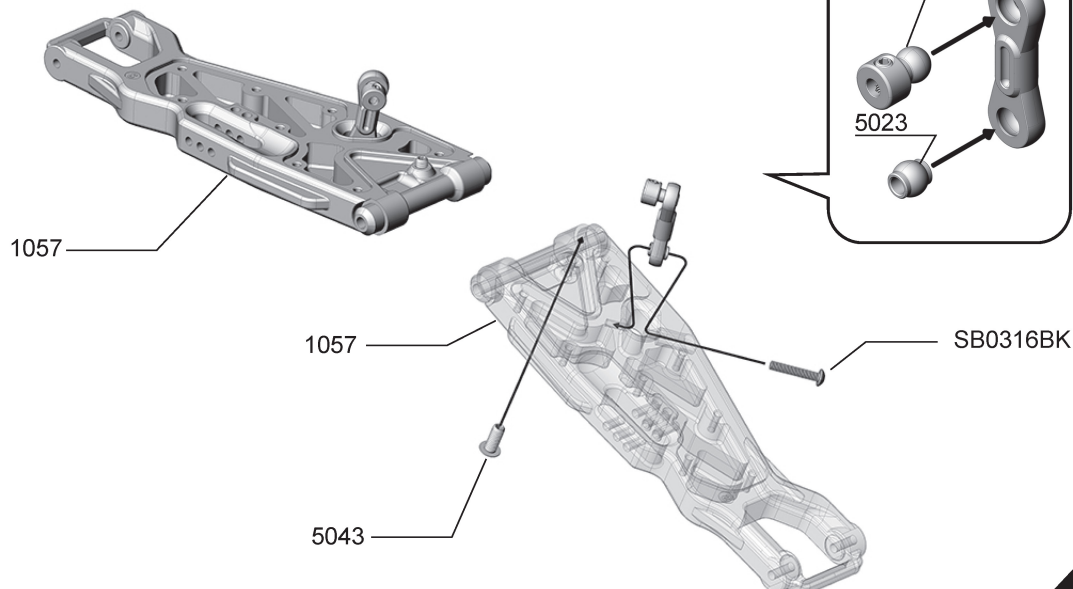


8



SF0335BK
Flat Screw
M3x35mm x 2




5007
Lower Arm Hinge Pin (70mm) x 2

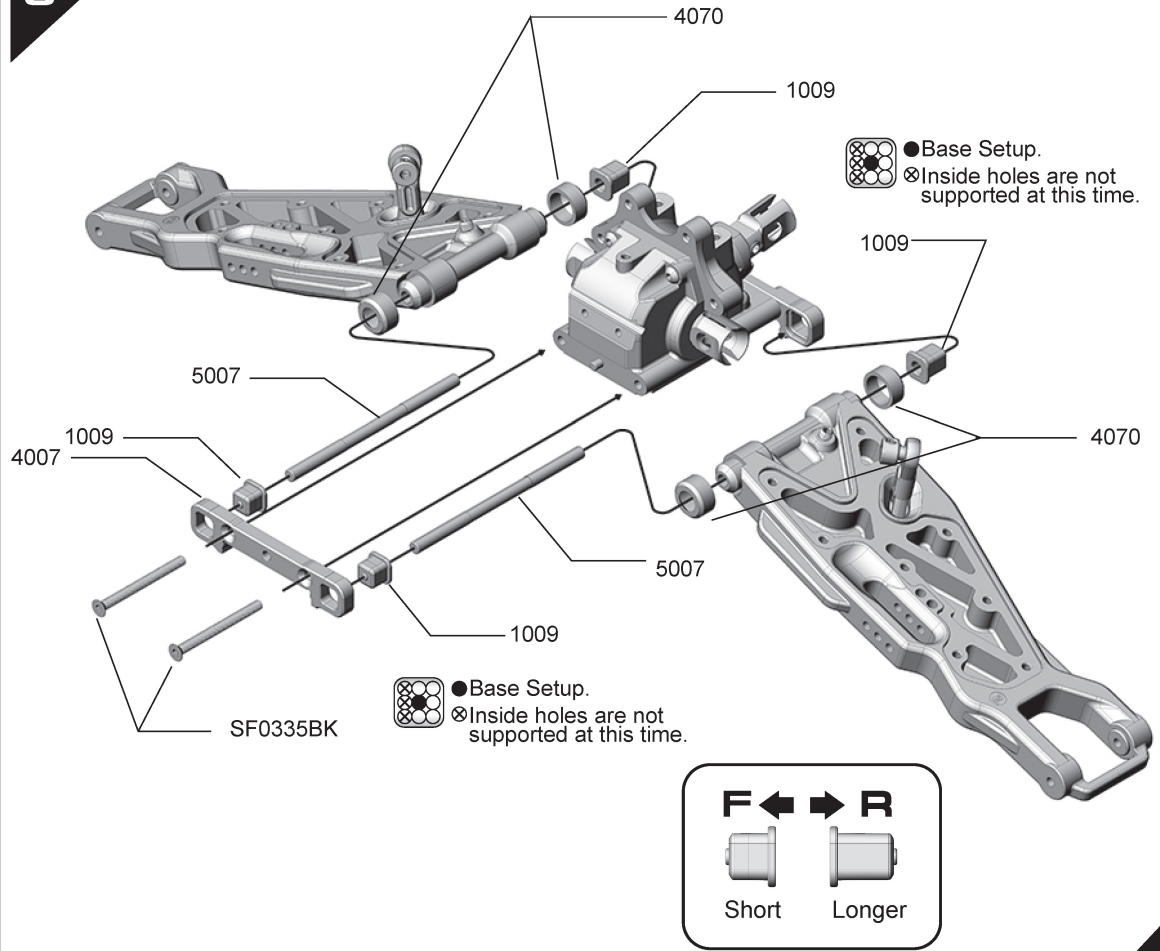

SS0303BK
Set Screw M3x3mm x 4

9

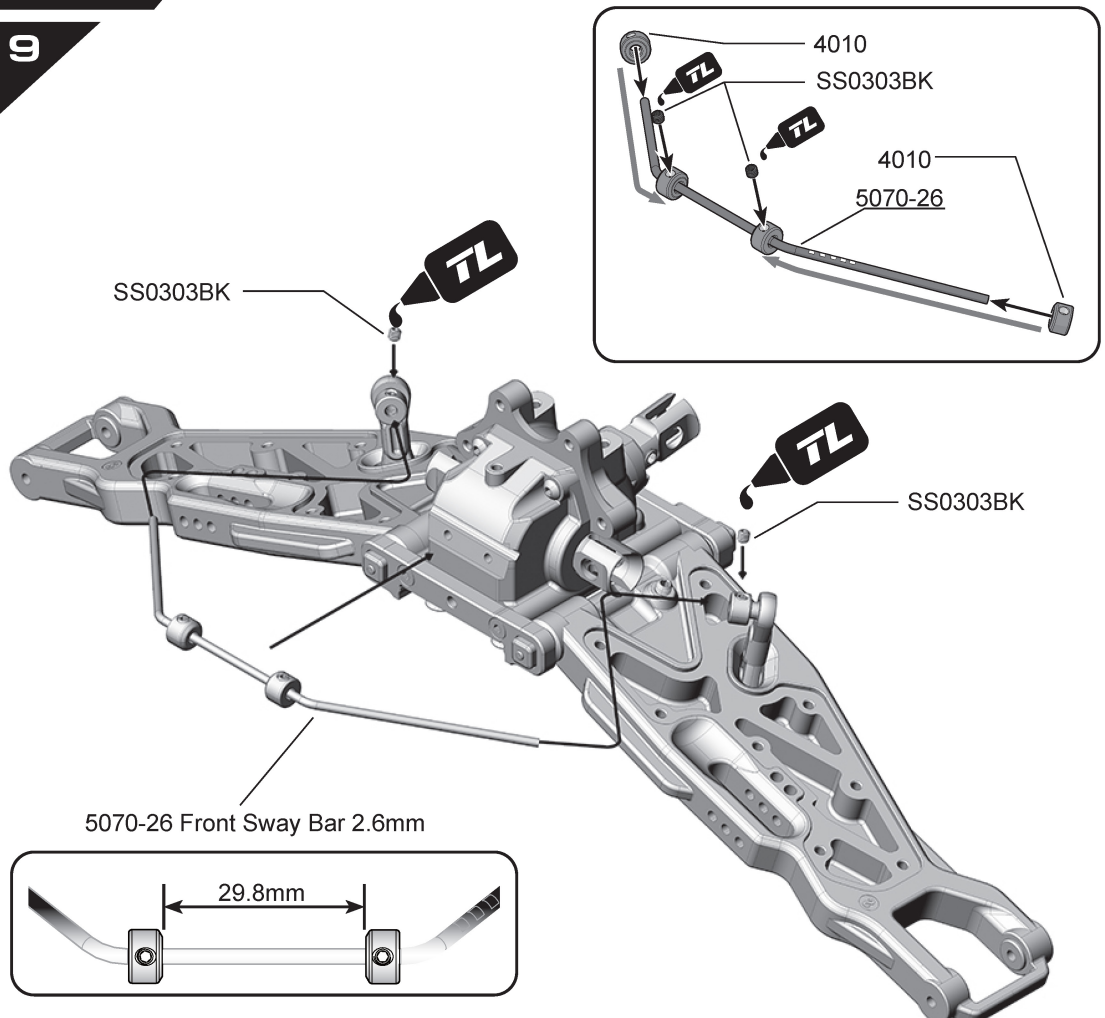


BAG E

SS0304BK
Set Screw M3x4mm x 2

SB0306BK
Ball Screw M3x6mm x 2

10

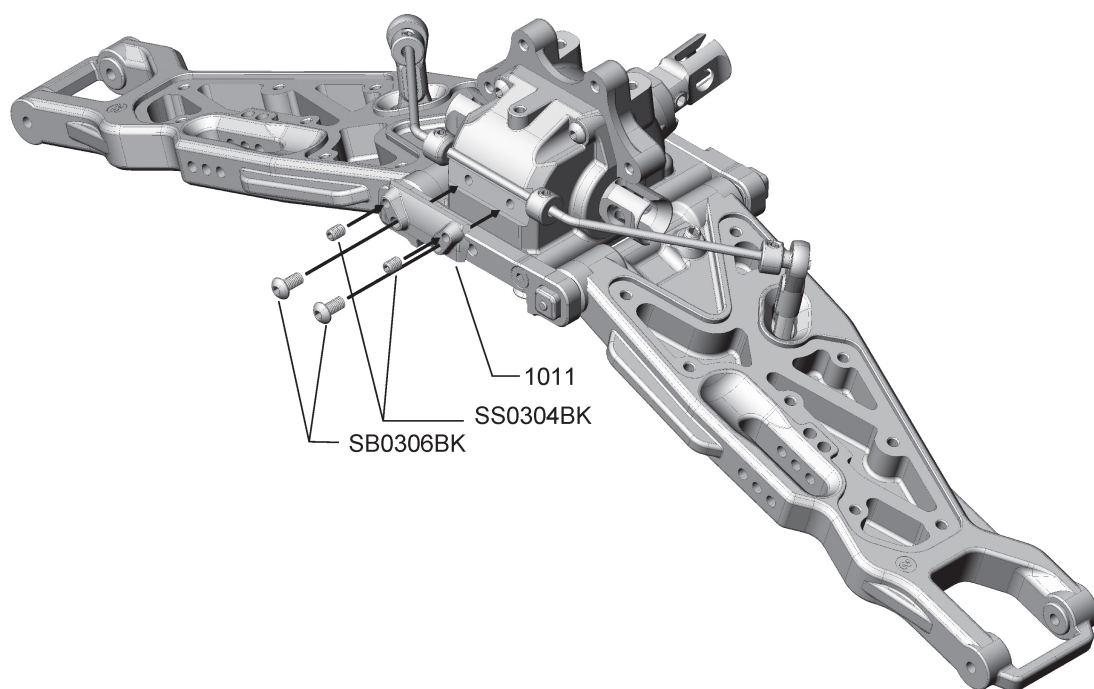


BAG F

SF0310BK
Flat Screw M3x10mm x2

SF0308BK
Flat Screw M3x8mm x2

11

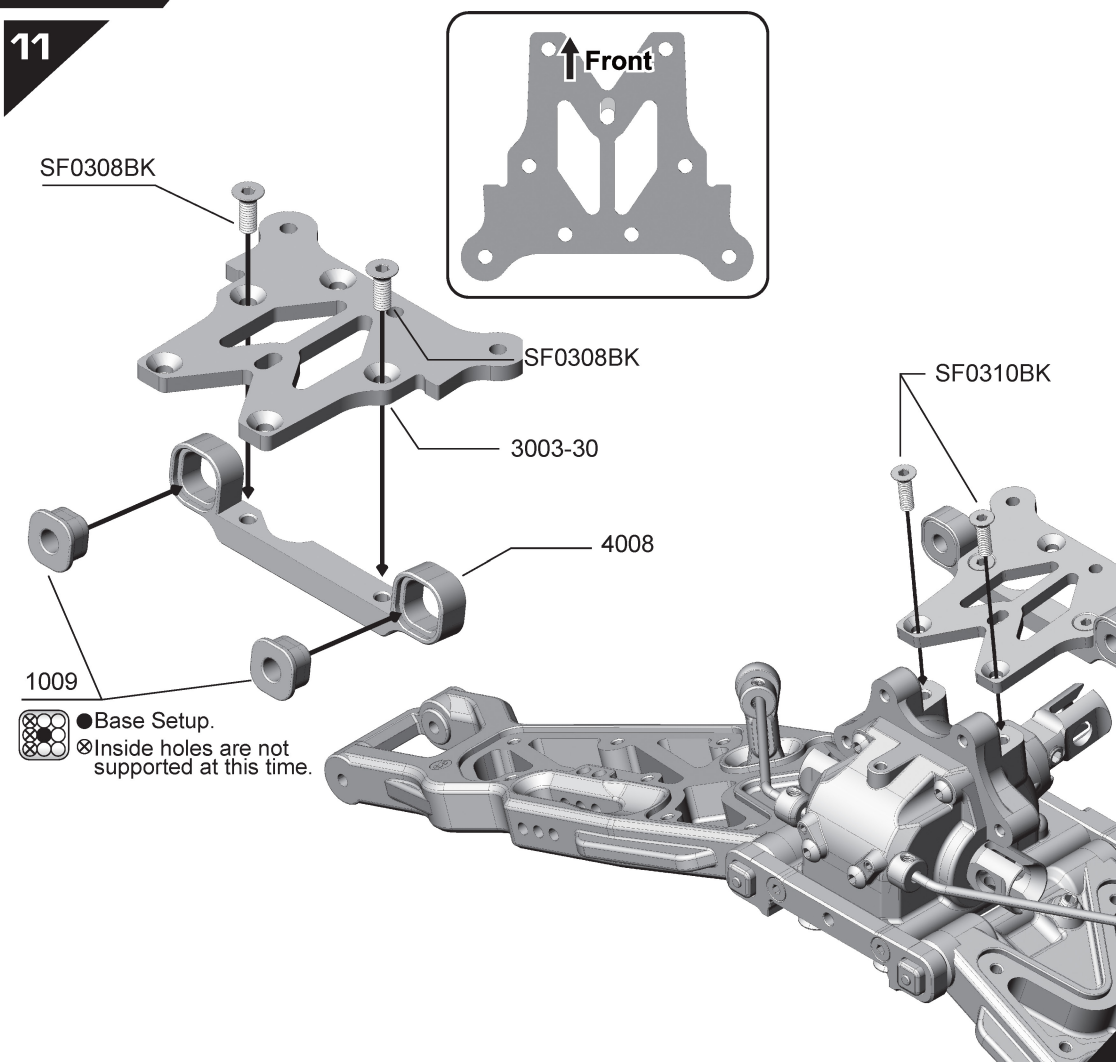


BAG F

12



x2

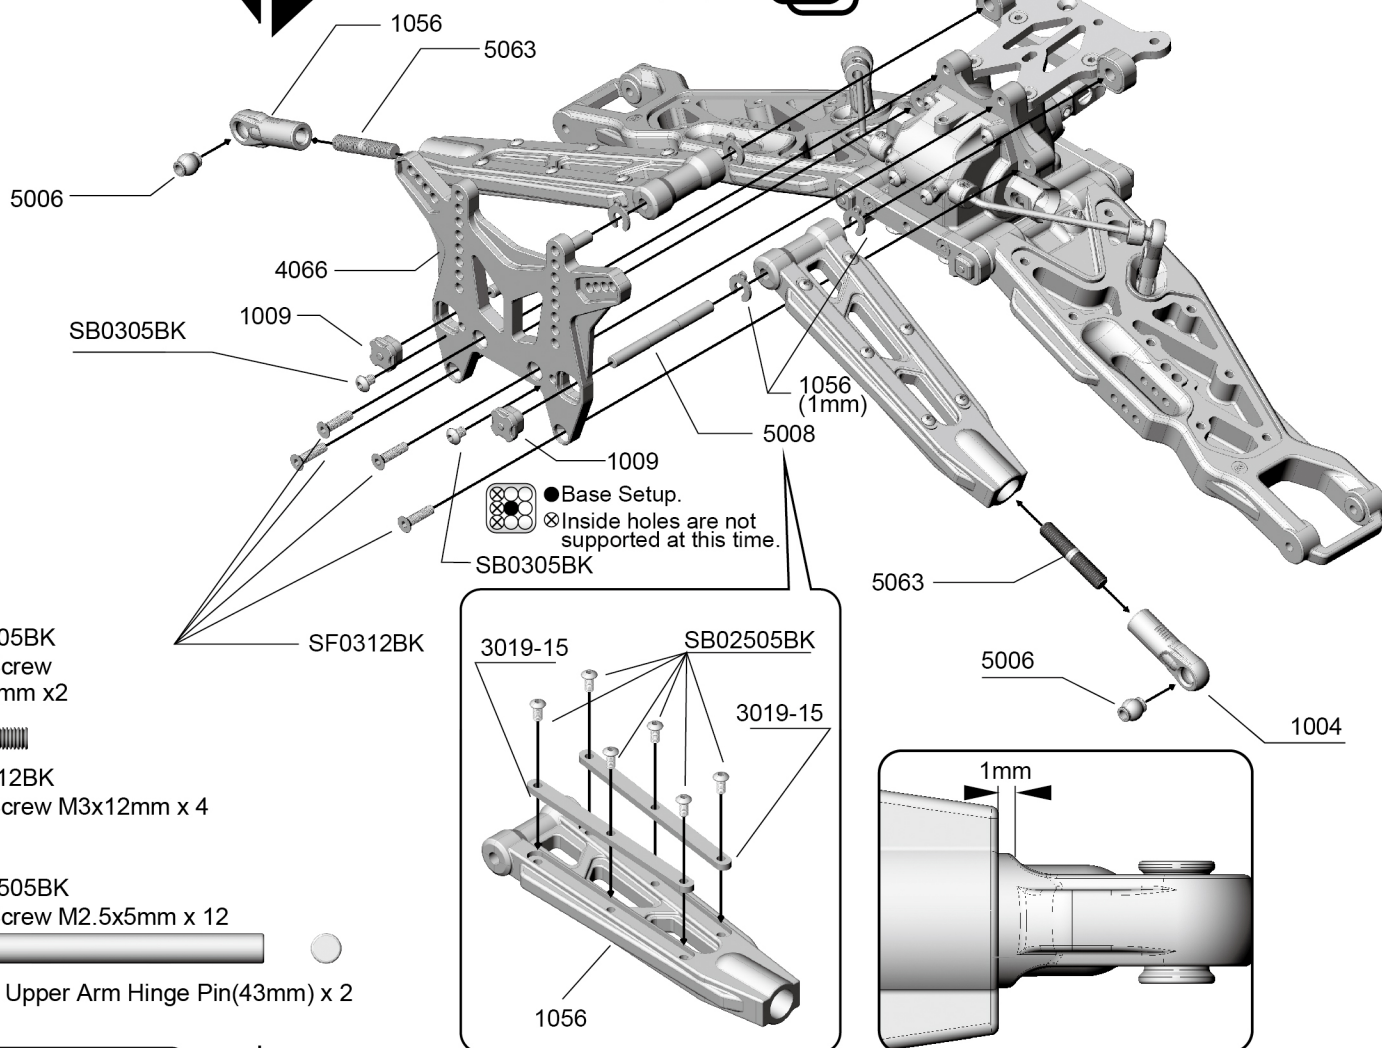

SB0305BK
Ball Screw
M3x5mm x2



SF0312BK
Flat Screw M3x12mm x 4



SB02505BK
Ball Screw M2.5x5mm x 12




5008 Upper Arm Hinge Pin(43mm) x 2

BAG G

13



x2

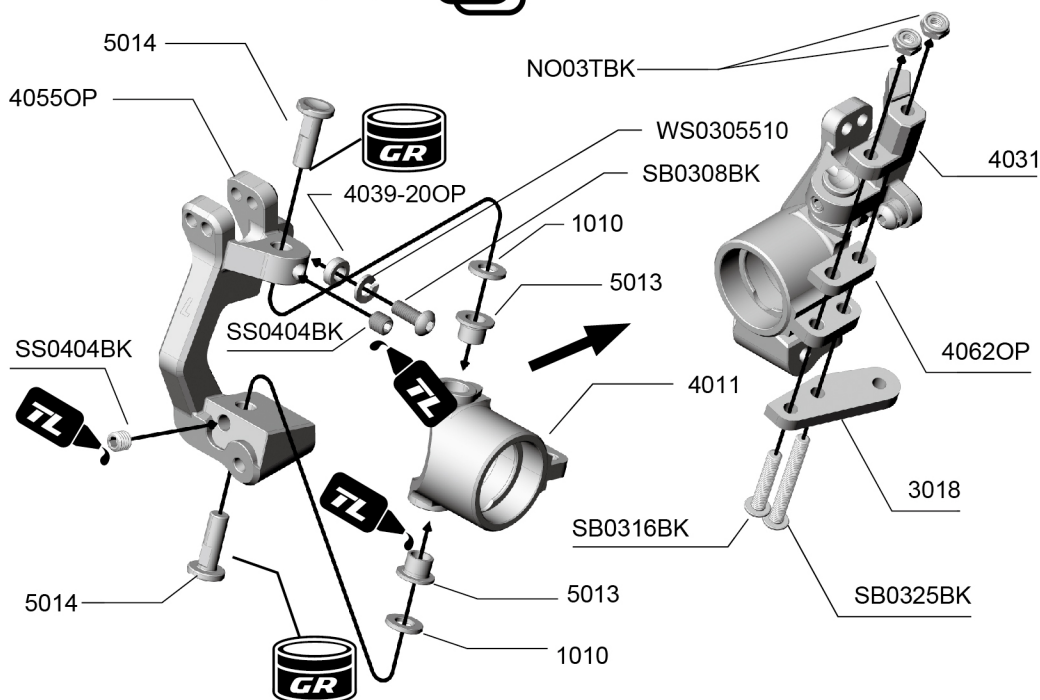

5014
Spindle Carrier
Hinge Pins x 4



SS0404BK
Set Screw M4x4mm x 4



SB0308BK
Ball Screw
M3x8mm x 2



SB0316BK
Ball Screw
M3x16mm x 2









SB0325BK
Ball Screw
M3x25mm x 2



NO03TBK
Nut Lock M3T x 4

BAG G

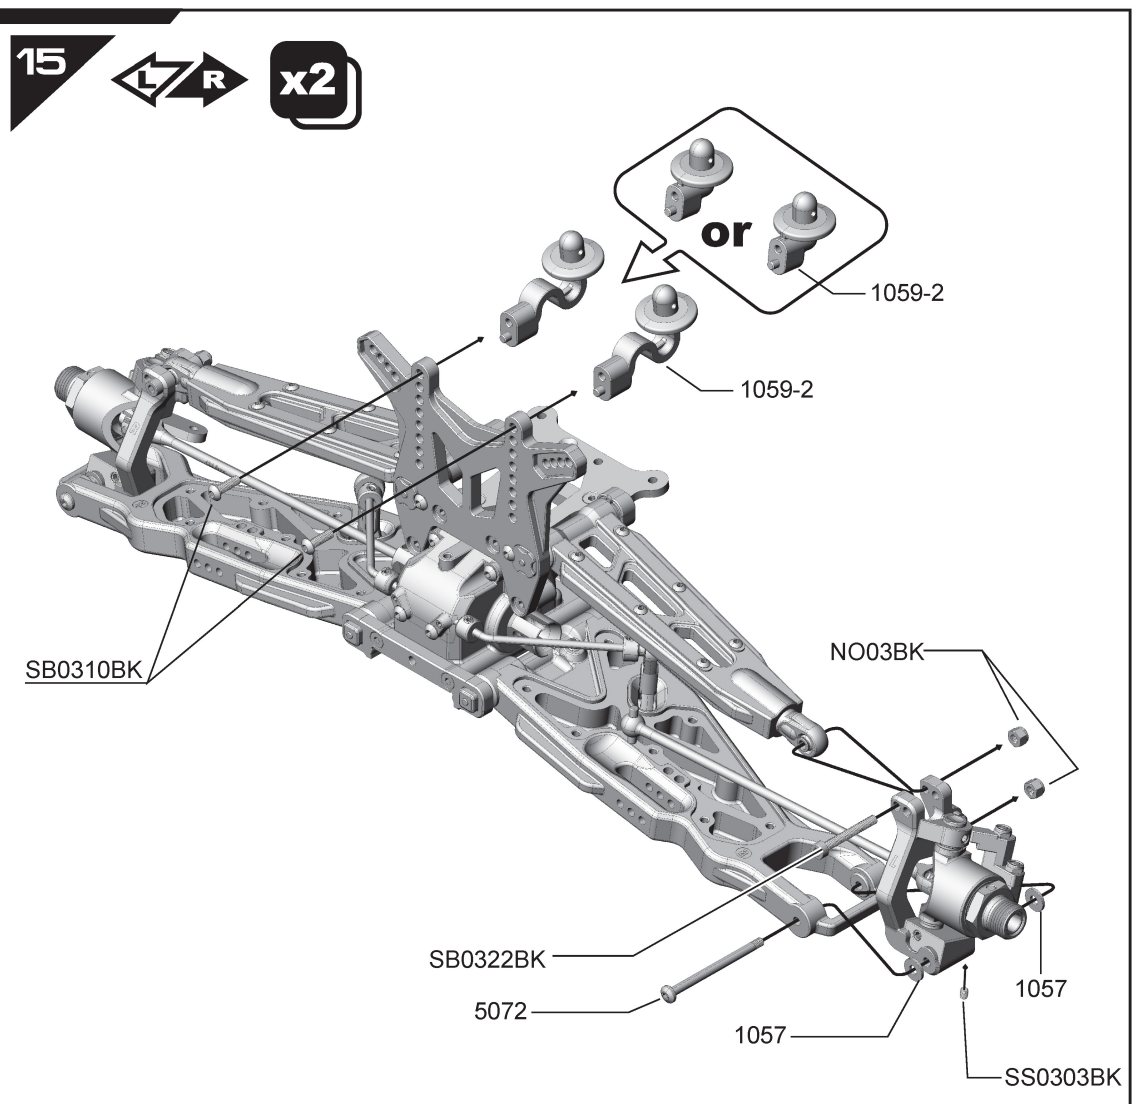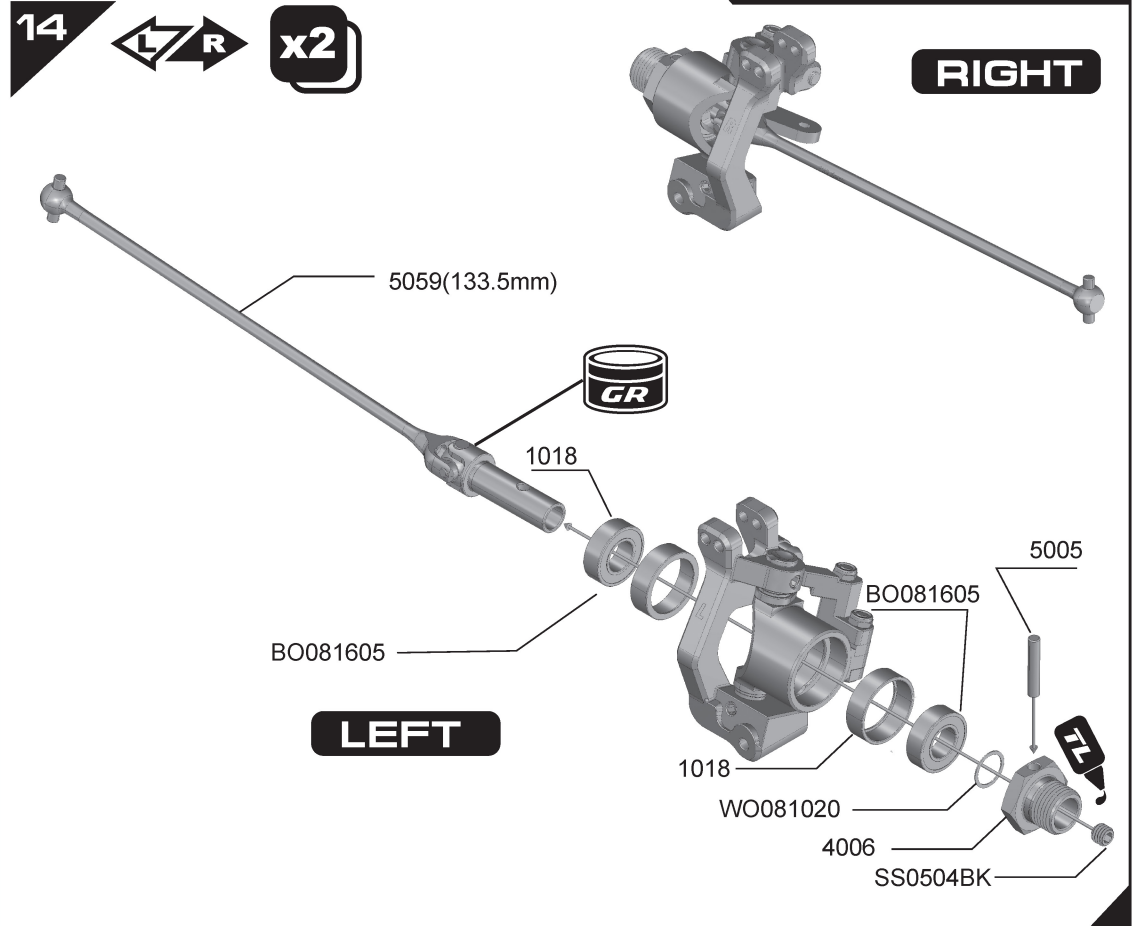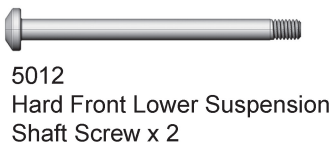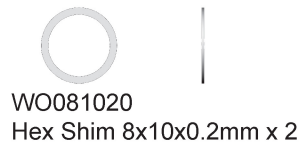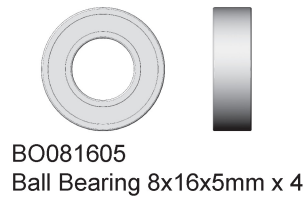

BAG H



NO03BK Nut Lock M3 x 2



WO030801
Shim 3x8x1mm x 4



WO030510
Shim 3x5x0.1mm x 4



BF030625
Flange Ball Bearing
3x6x2.5mm x 4



5042
Hex Shanked Button
M3x13.7mm x2



BO061003
Ball Bearing 6x10x3mm x 2



SC0206BK
Cap Screw M2x6mm x 1



SB0310BK
Ball Screw M3x10mm x 2





BO061003
Ball Bearing 6x10x3mm x 2




WO060830
Shim 6x8x0.3mm x 3

16

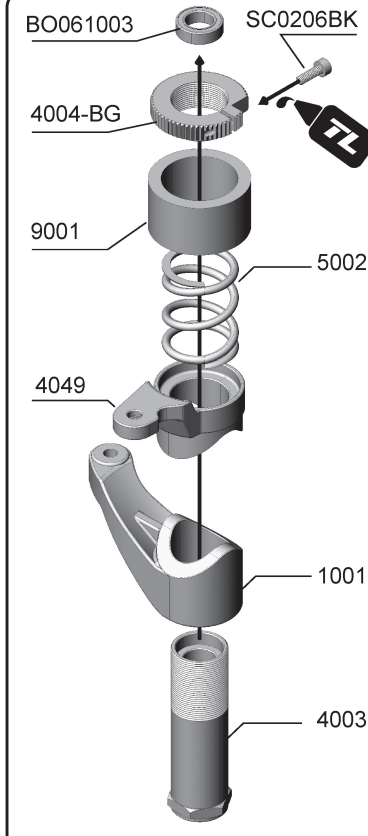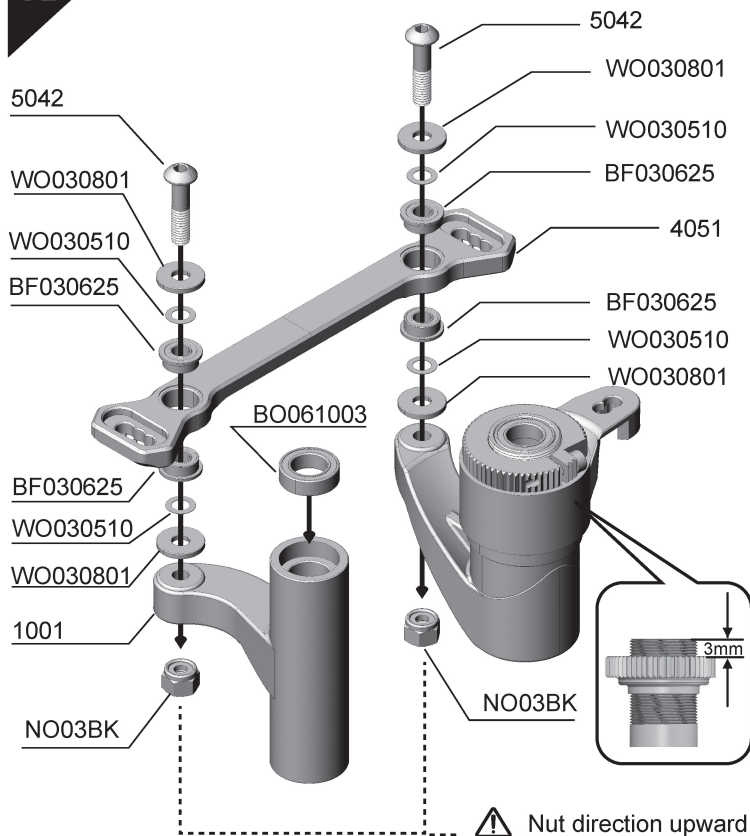

17

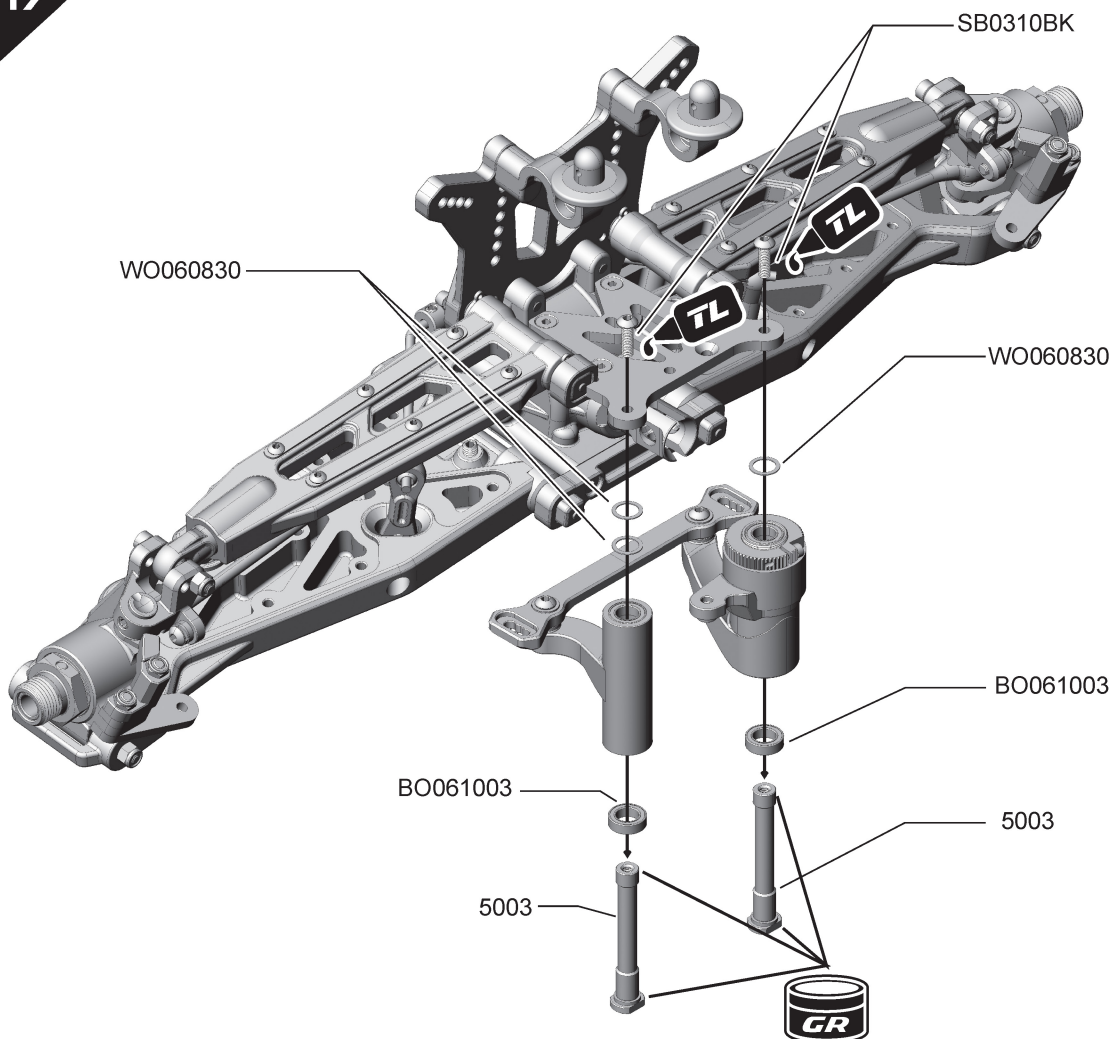

BAG I

18



x2



SB0316BK
Ball Screw M3x16mm x 2



5043
Down Stop Screw
M4x10mm x 2

5043

1058

SB0316BK

1005
5010

5023

19



SB0310BK
Ball Screw M3x10mm x 2



SF0312BK
Flat Screw M3x12mm x 6



SF0316BK
Flat Screw M3x16mm x 2



NO03BK Nut Lock M3 x 1

SF0312BK

NO03BK

1059-1

1059-2

4066

1059-2

SB0310BK

SB0316BK

SF0312BK


BAG 1

20

SF0335BK
Flat Screw M3x35mm x 2






5007
Lower Arm Hinge Pin x 2

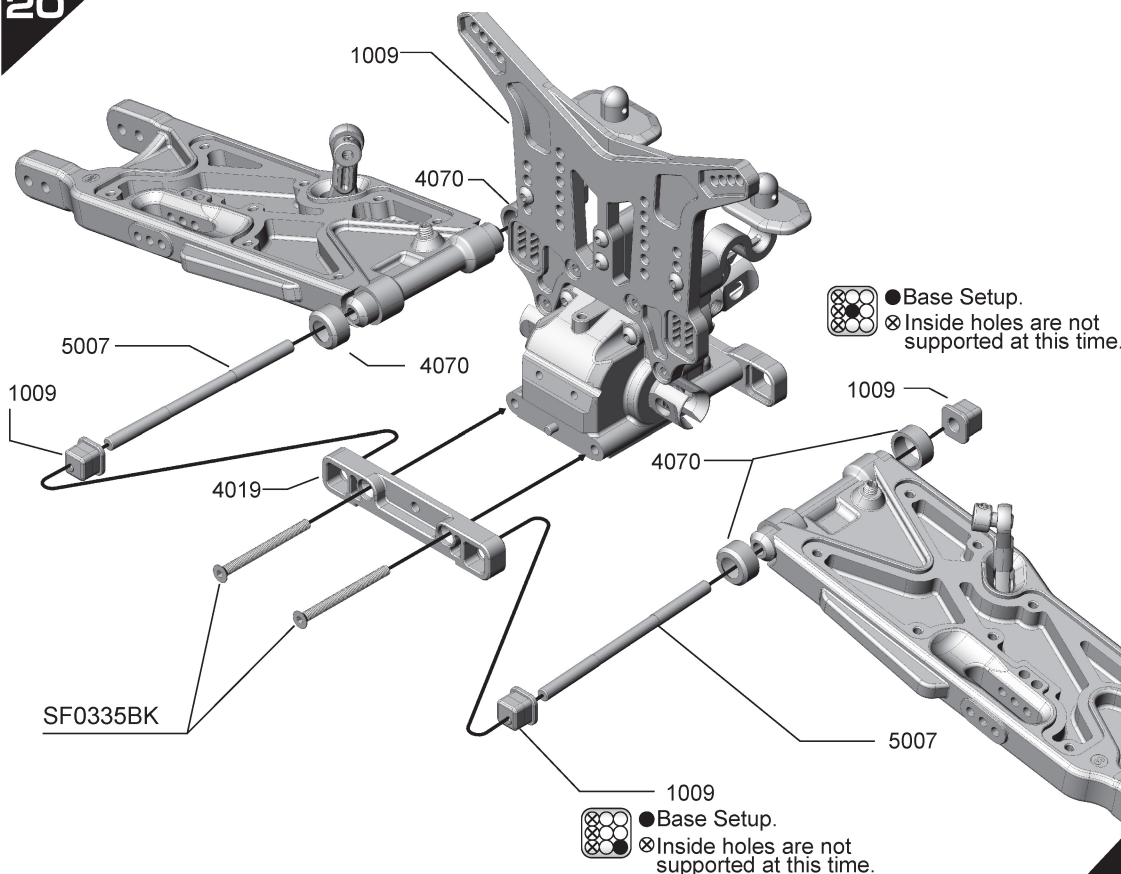

21

SS0303BK
Set Screw M3x3mm x 4

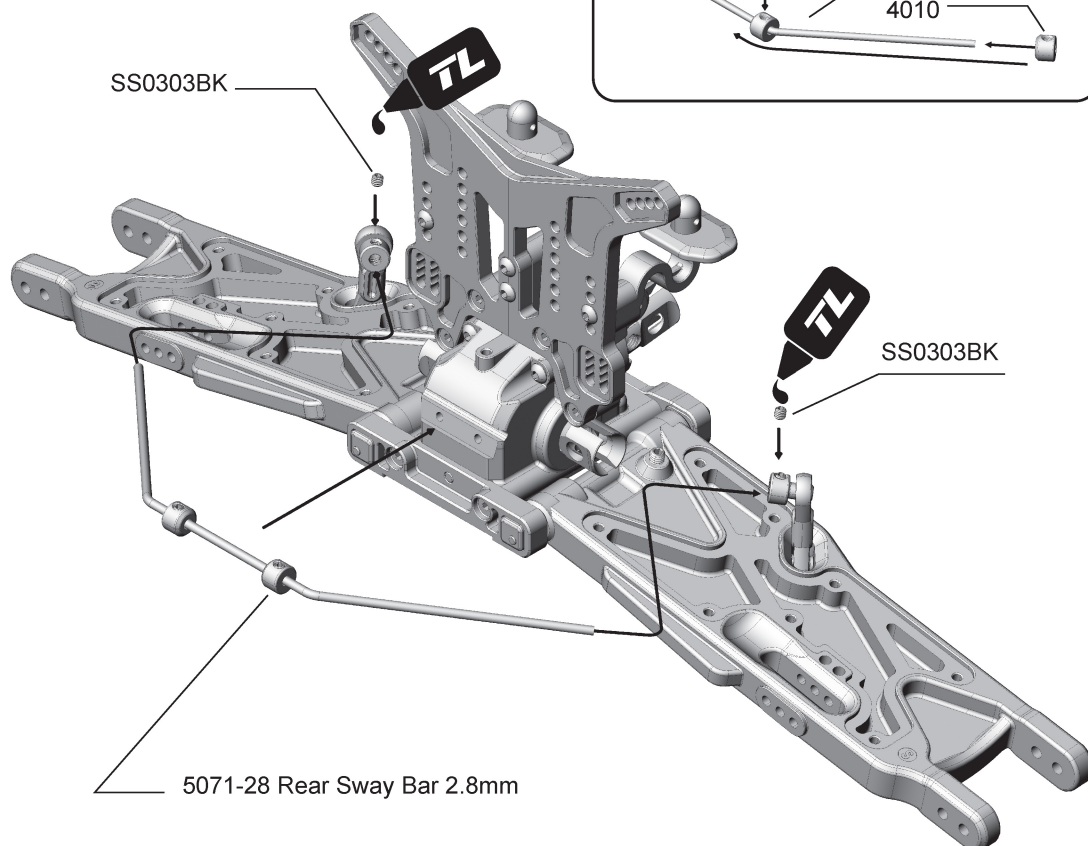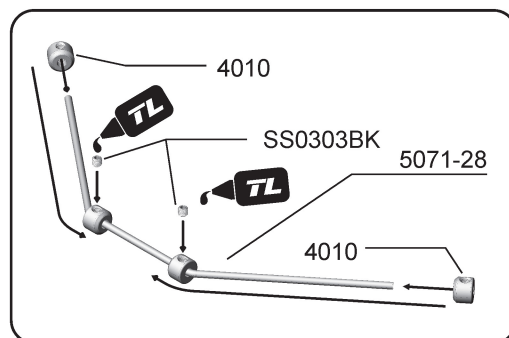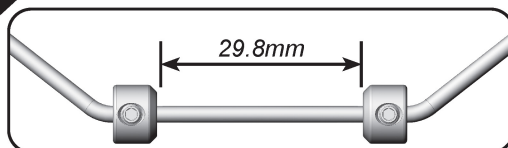

24

← L / R → **x2**


NO03BK
Nut Lock M3 x 2


5032
Rear Outer Hinge Pins x 2

NO03BK

5032

1058

25

← L / R → **x2**

RIGHT

NOT 1:1

65.2mm

Mark On Right Side

59 mm


5062
Camber Turnbuckle
5x86mm x 2

Short Longer

1035

5034

5034

1019

5062

1019

5006




SC0310BK
Cap Screw M3x10mm x 2



SB0322BK
Ball Screw M3x22mm x 2




NO03BK
Nut Lock M3 x 2

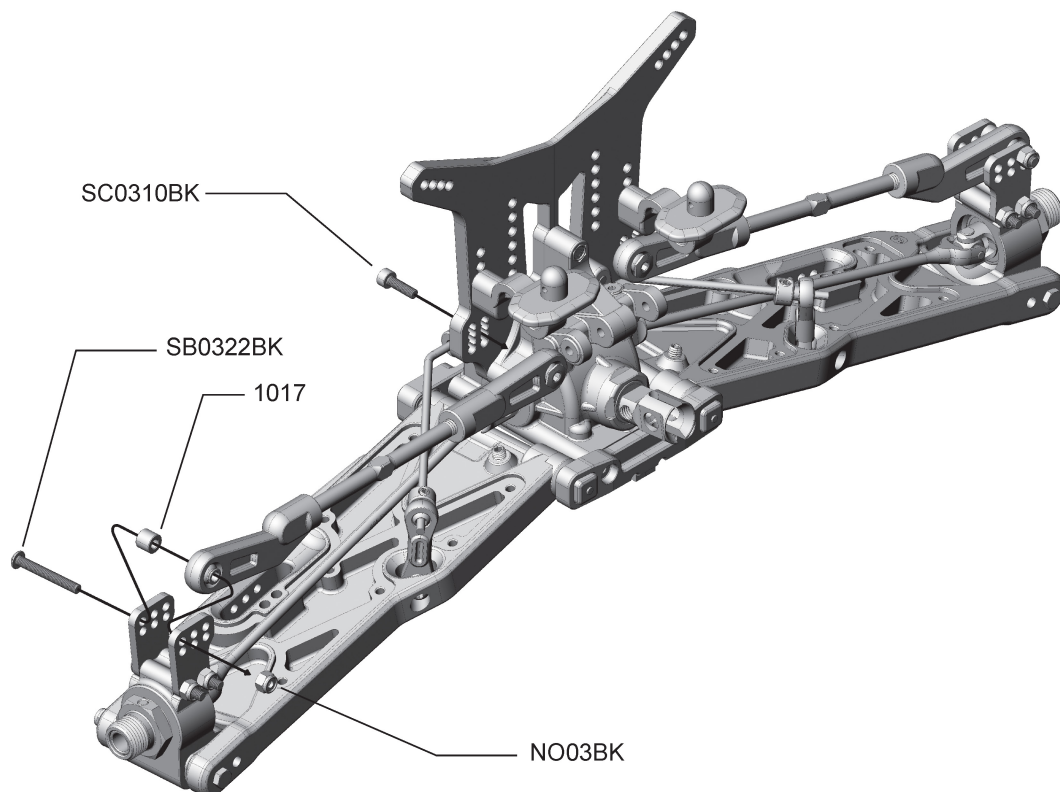


NO03BK
Nut Lock M3 x4



SC0316BK
Cap Screw M3x16mm x4

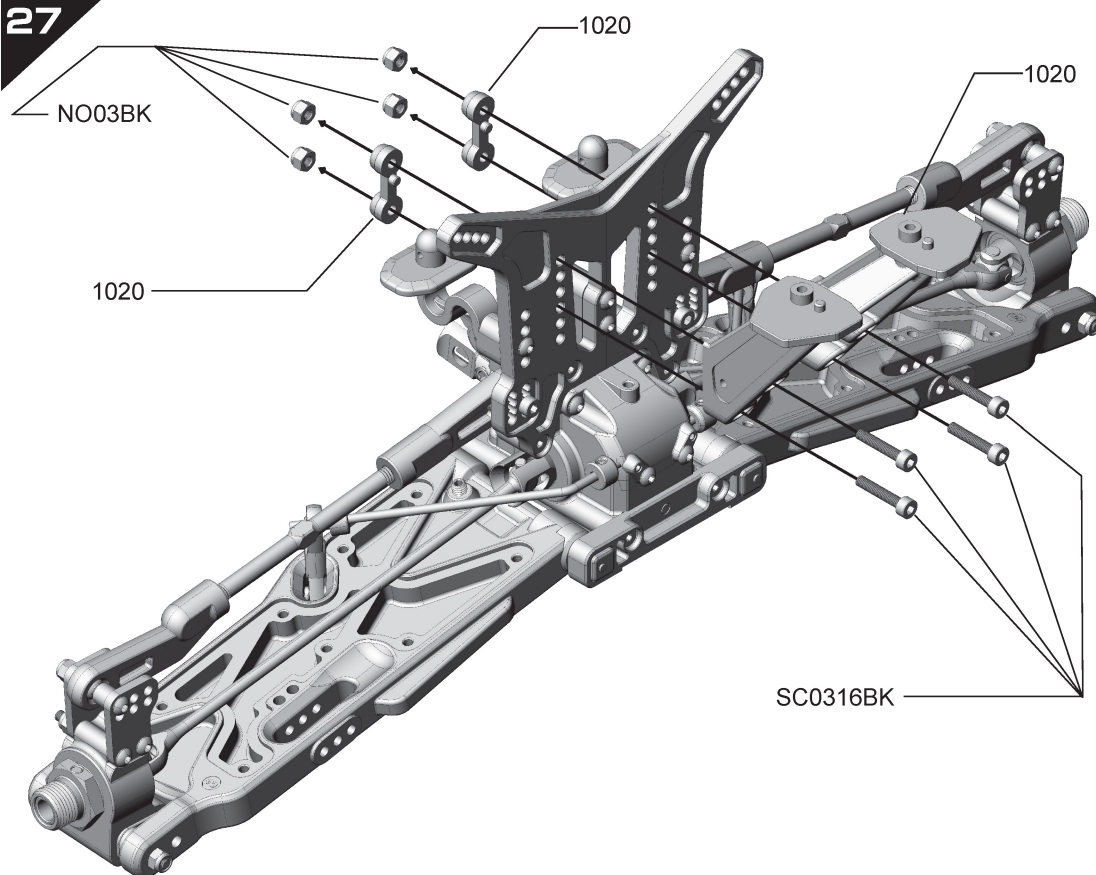


28



5042
Hex Shank Button
M3x13.7mm x 4







SS0303BK
Set Screw
M3x3mm x 2



SF0308BK
Flat Screw
M3x8mm x 4




BO050825
Ball Bearing
5x8x2.5mm x 2

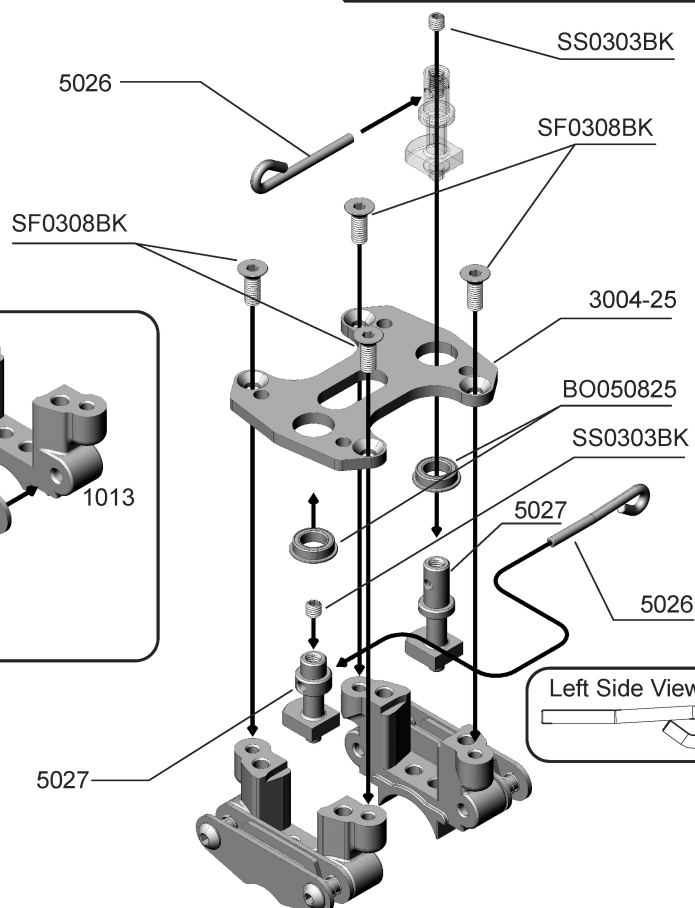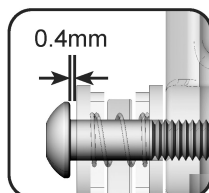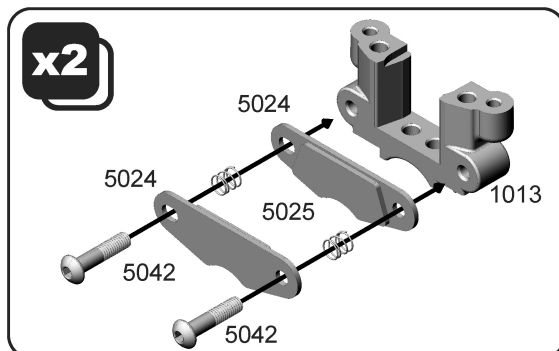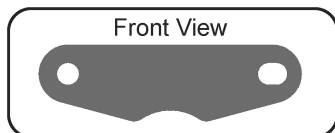

29



SB0325BK
Ball Screw
M3x25mm x 4

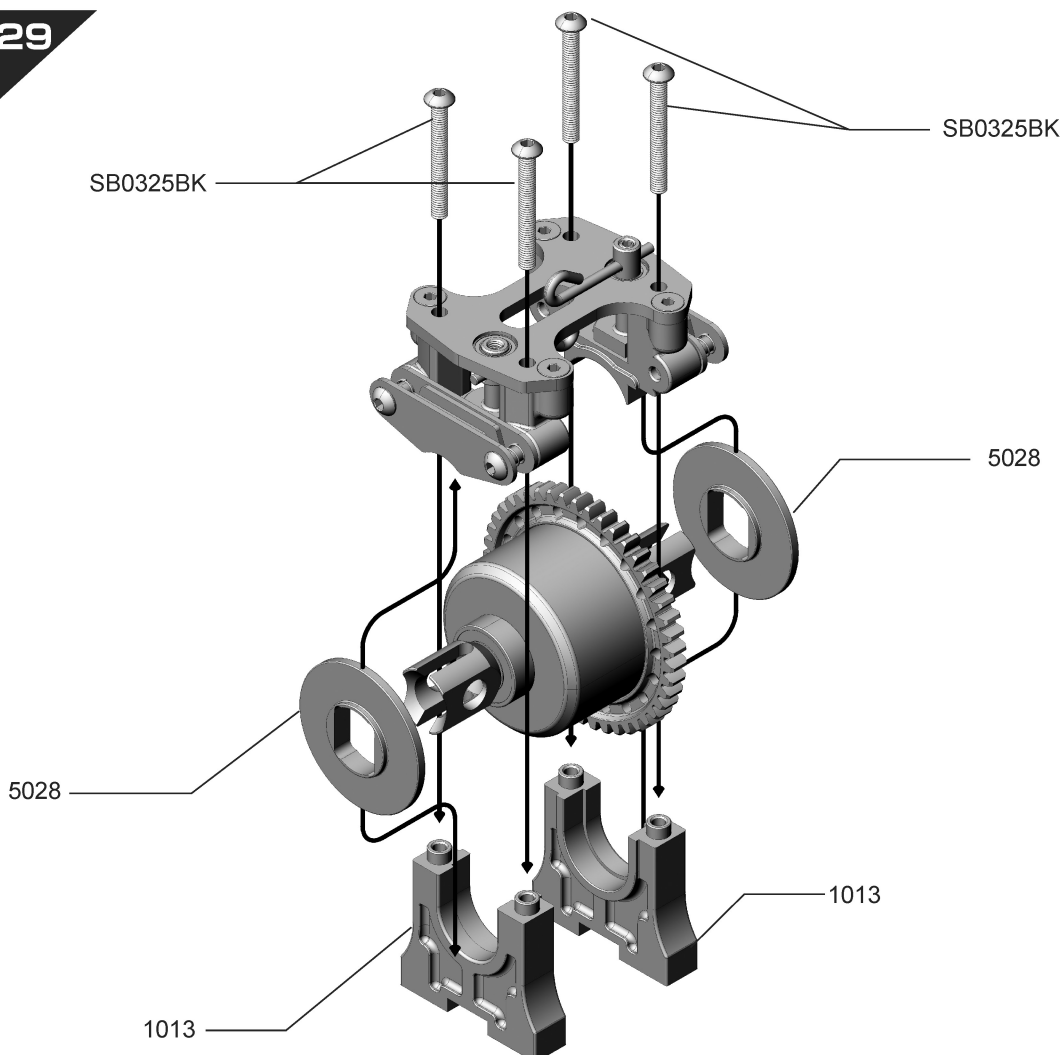

BAG L


30



SF0306BK
Flat Screw M3x6mm x8



SF0408BK
Flat Screw M4x8mm x2

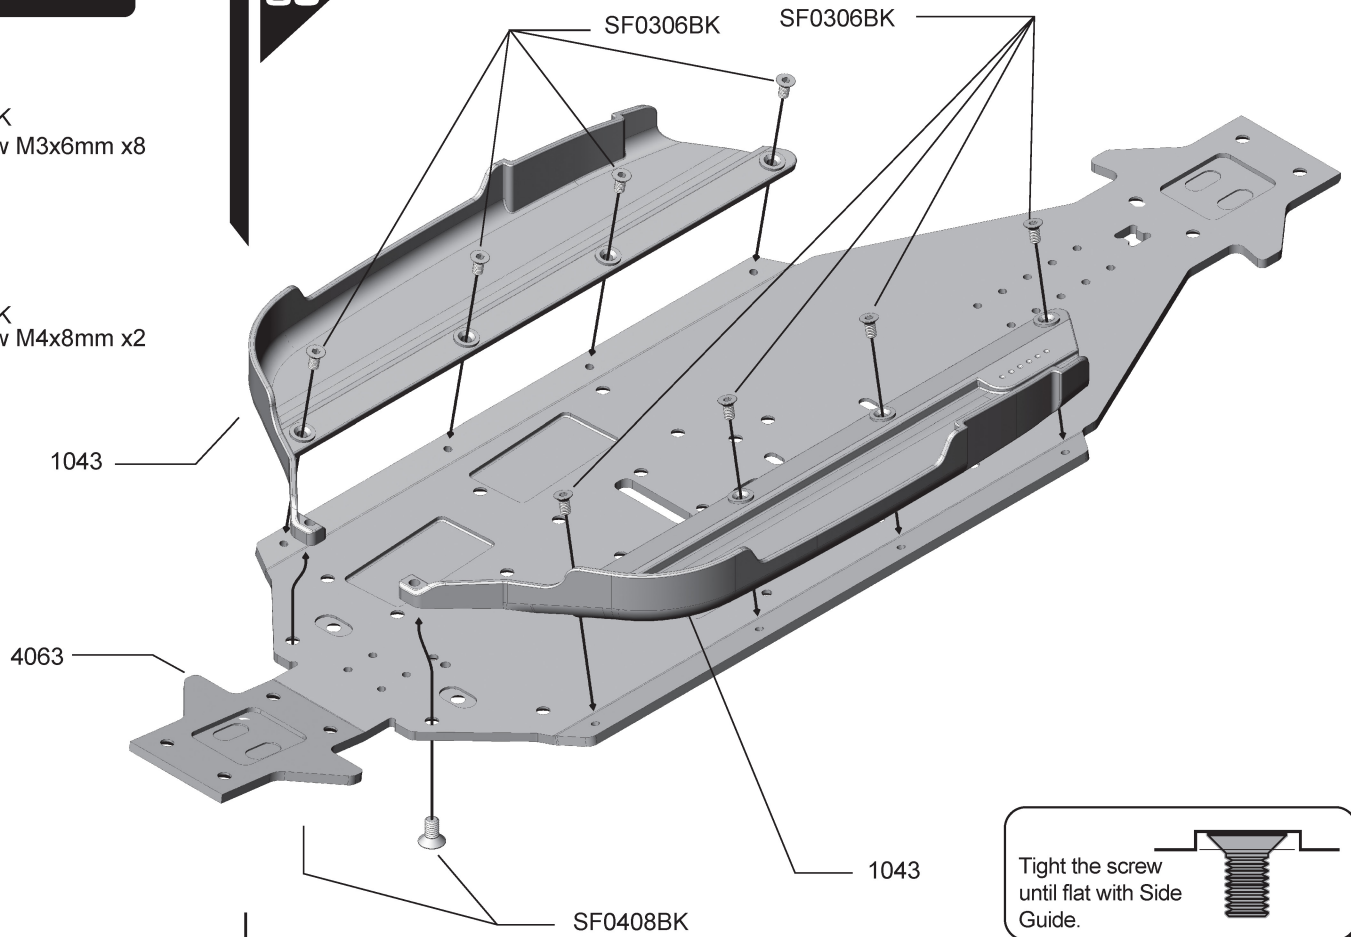


31



SF0410BK
Flat Screw M4x10mm x2




SF0416BK
Flat Screw M4x16mm x4

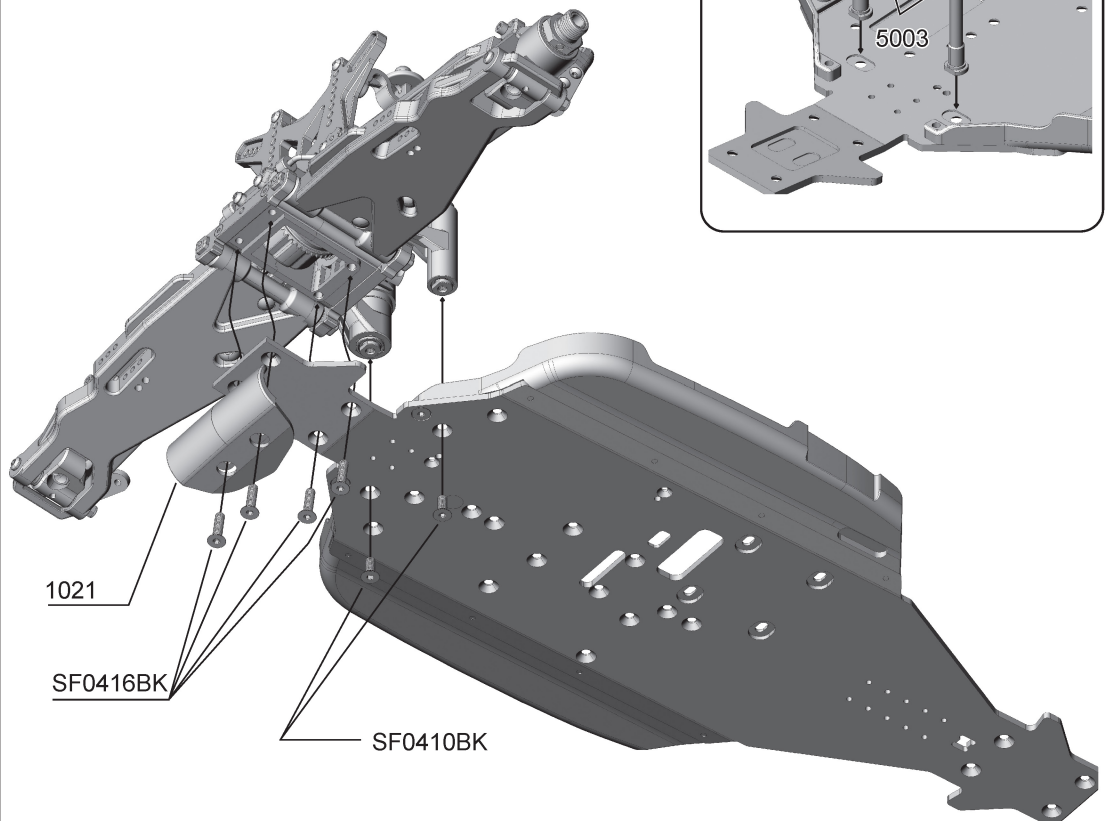

32



SF0310BK
Flat Screw
M3x10mm x 1




SF0412BK
Flat Screw
M4x12mm x 2



SF0410BK
Flat Screw
M4x10mm x 4



NO04BK
Nut Lock M4 x 2

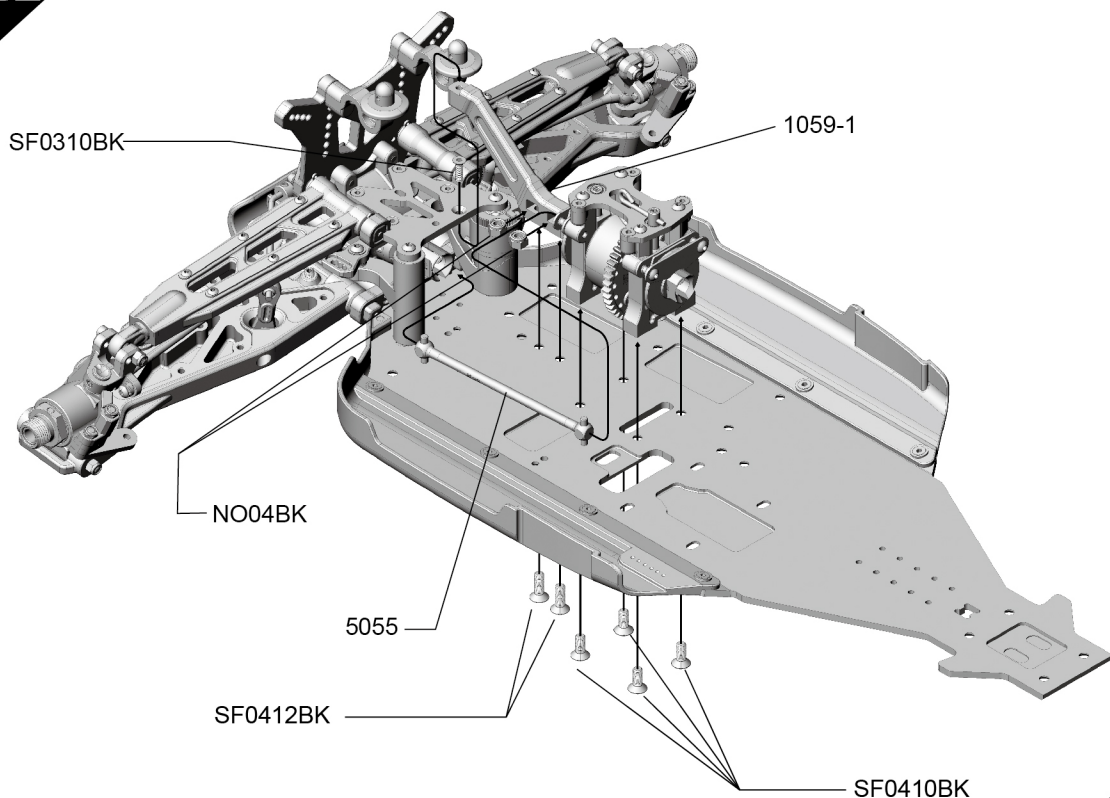

SB0340BK
Ball Screw
M3x40mm x 1



SF0416BK
Flat Screw
M4x16mm x 4



SF0412BK
Flat Screw
M4x12mm x 2




NO03BK
Nut Lock M3 x 1



NO04BK
Nut Lock M4 x 2

33

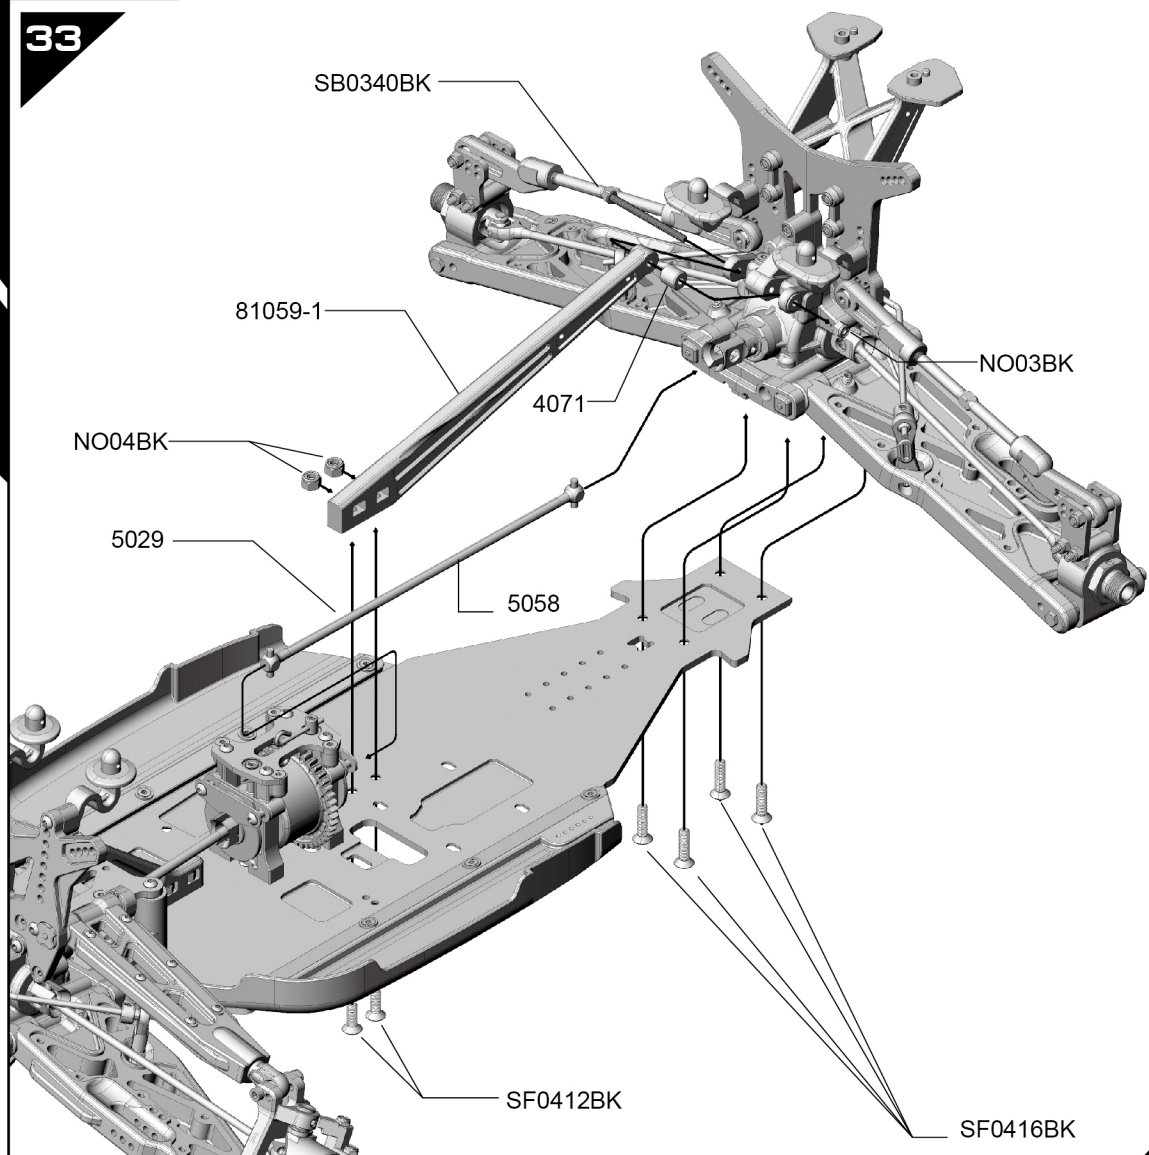


BAG M




SB0314BK
Ball Screw M3x14mm x8

34

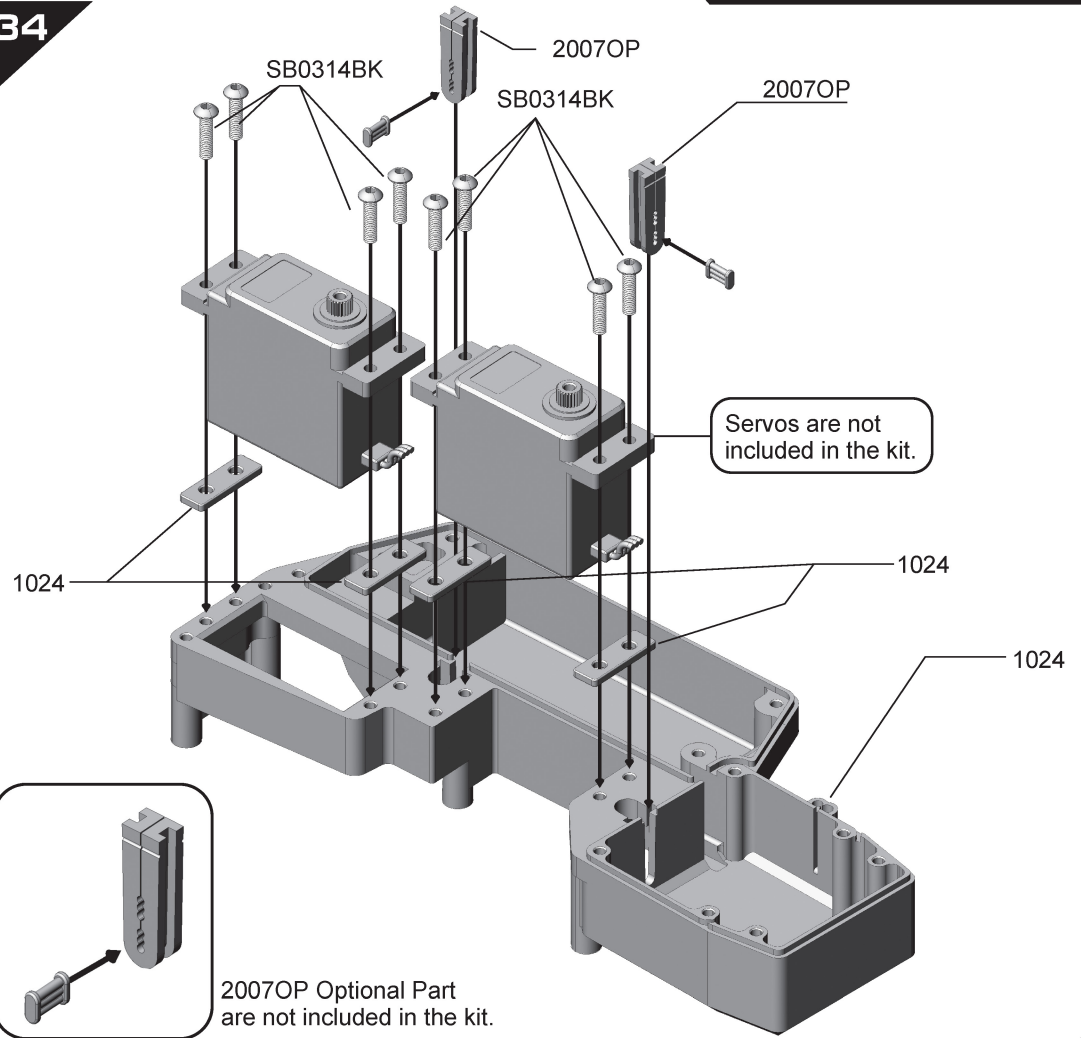

SF0308BK
Flat Screw M3x8mm x 2

35

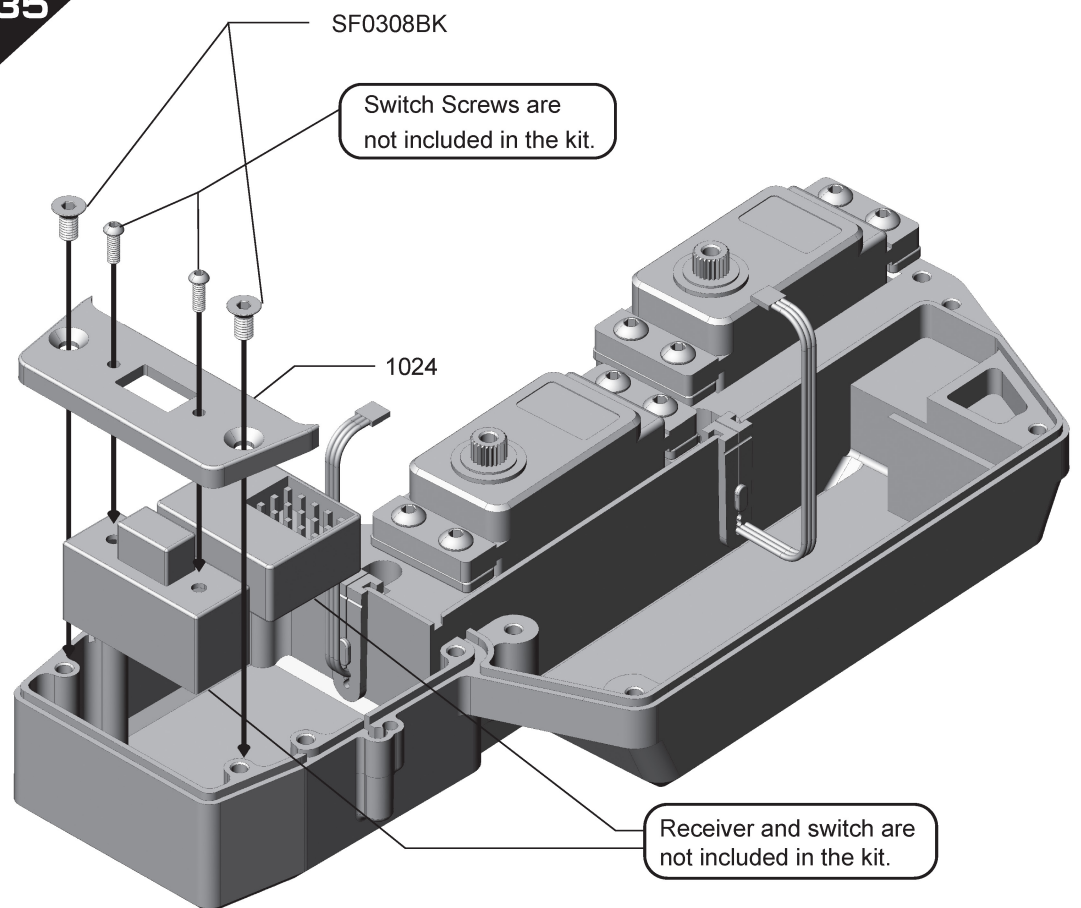

BAG M

36

1023

BAG A

SF0308BK

SF0308BK

1024


SS0303BK



SF0308BK
Flat Screw M3x8mm x 4



SS0303BK
Set Screw M3x3mm x 1

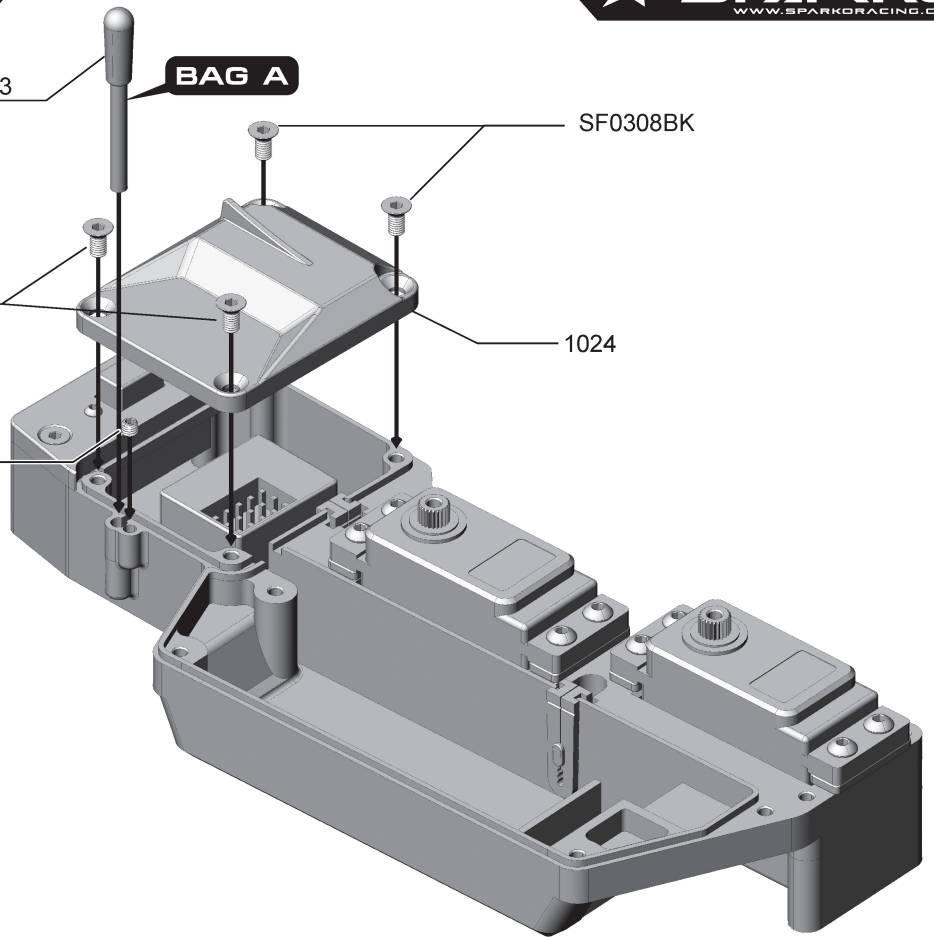

37

SF0308BK

1024


SF0308BK

Not included

Receiver Battery and
AMB are not included in
the kit.



SF0308BK
Flat Screw M3x8mm x 4

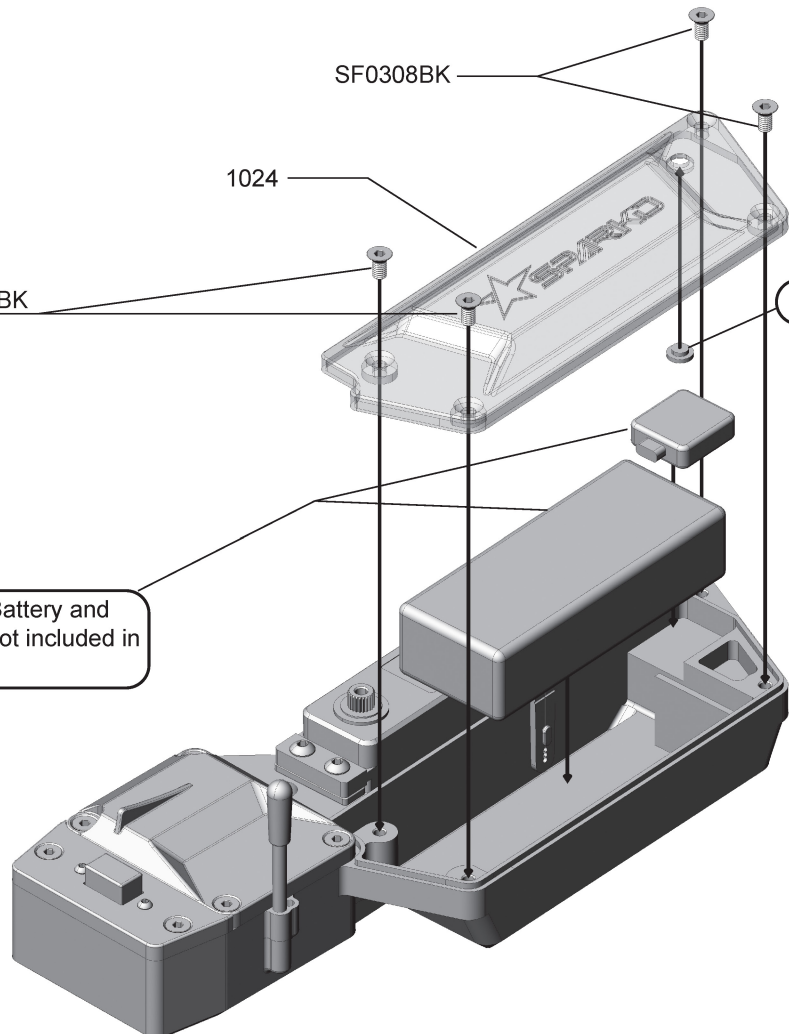


BAG M



SF0410BK
Flat Screw
M4x10mm x 5

38

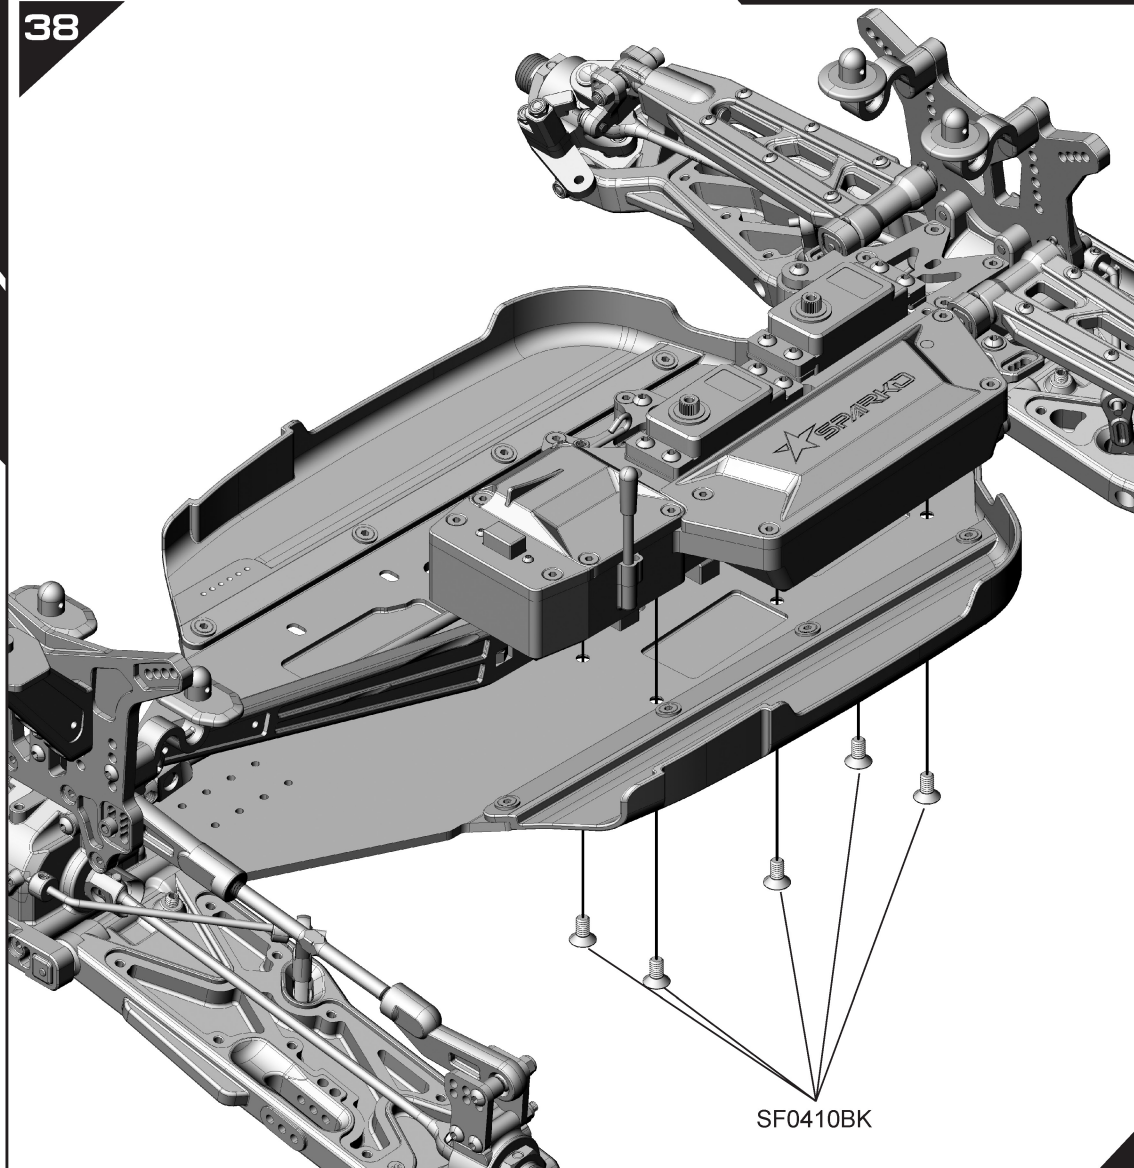

BAG N



5061
Steering Turnduckle
M4x86mm x 2

39




x2

RIGHT

LEFT

1:1

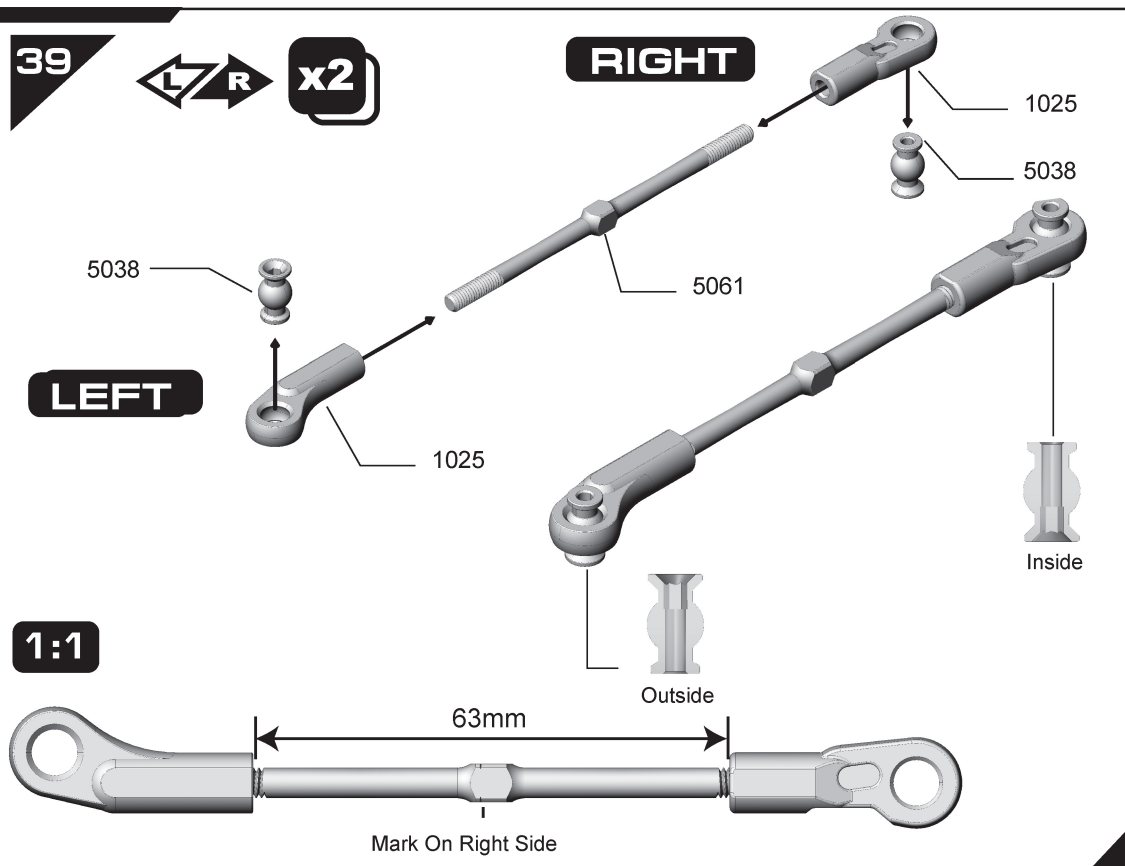


40



SB0310BK
Ball Screw
M3x10mm x 4

SB0310BK

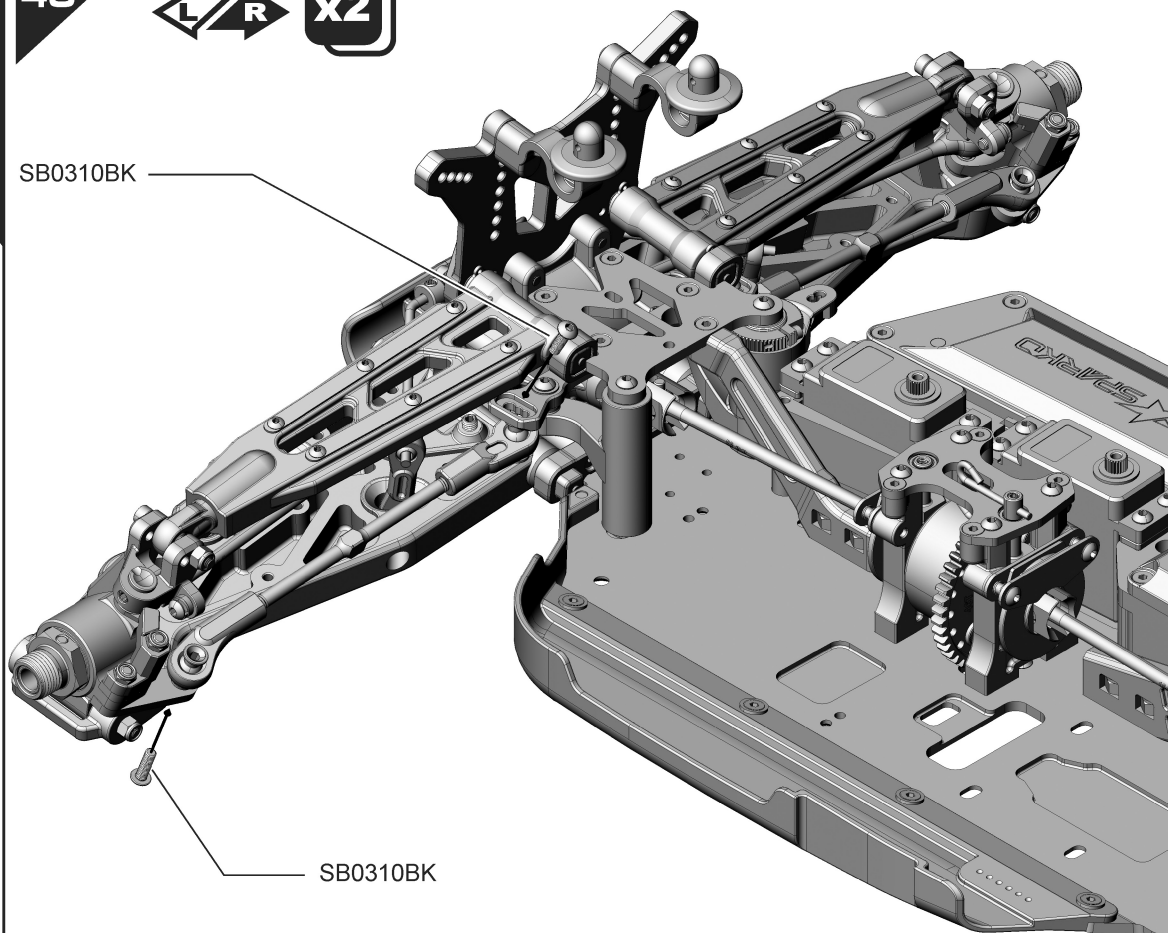

SB0310BK



5042
Hex Shanked Button
M3x13.7mm x 1




5022
Servo Steering Turnbuckle
M3x30mm x 1



NO03BK
Nut Lock
M3 x 1

41

NO03BK

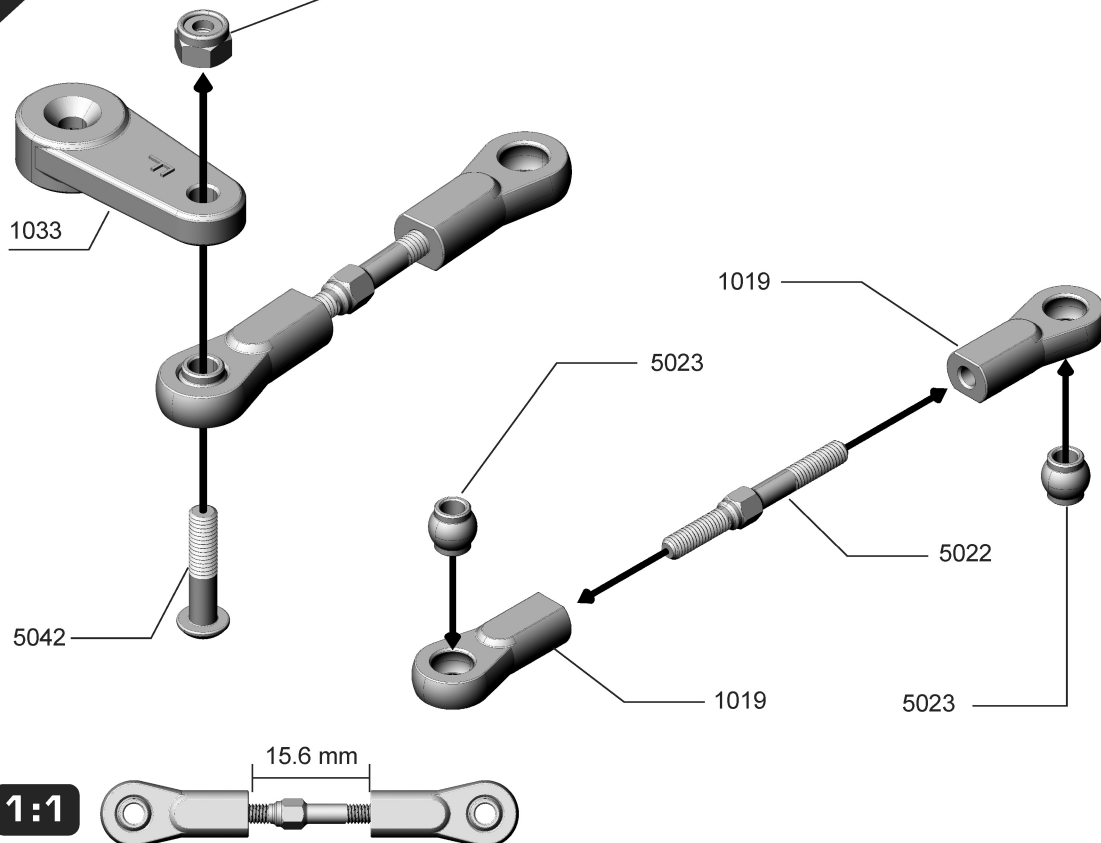

1:1

15.6 mm

BAG N



SF0308BK
Flat Screw
M3x8mm x 1




5042
Hex Shanked Button
M3x13.7mm x 1



NO03BK
Nut Lock
M3 x 1

42

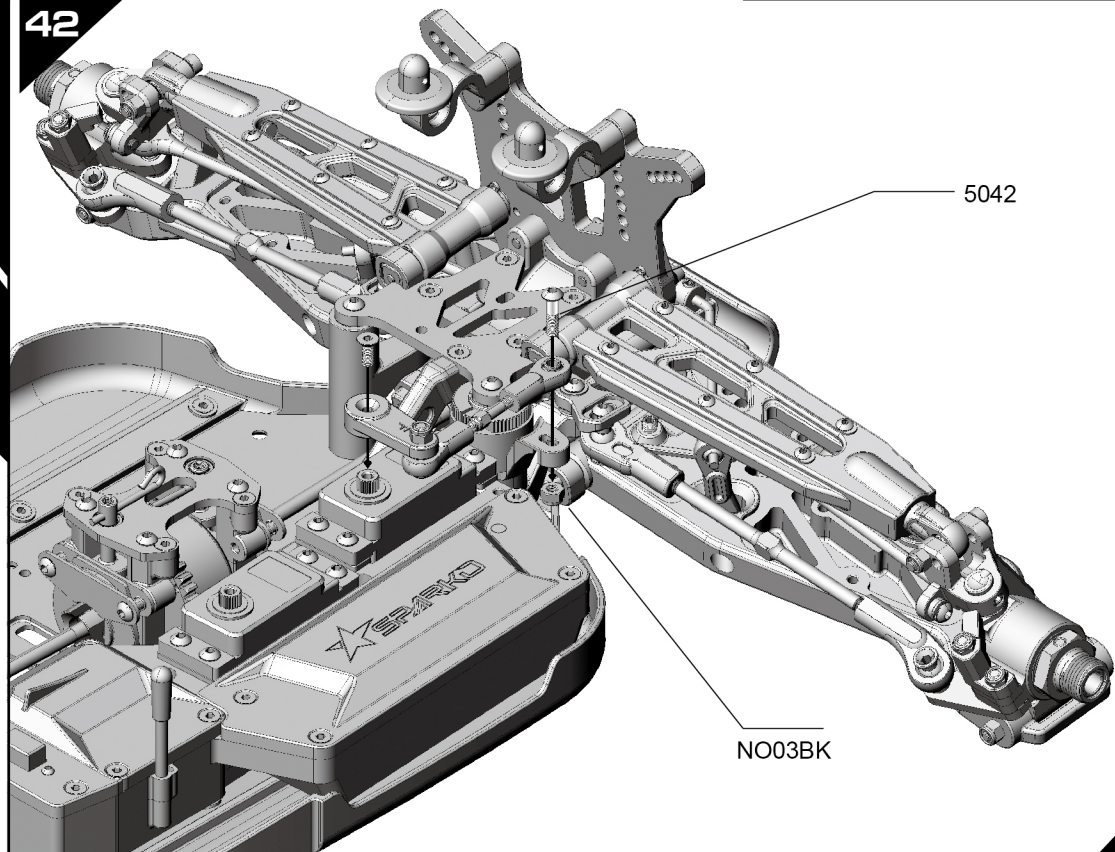

BAG O



SF0308BK
Flat Screw
M3x8mm x 2




SB0310BK
Ball Screw
M3x10mm x 2



SB02505BK
Ball Screw
M2.5x5mm x 1


43

The Fuel Tank comes 90% assembled

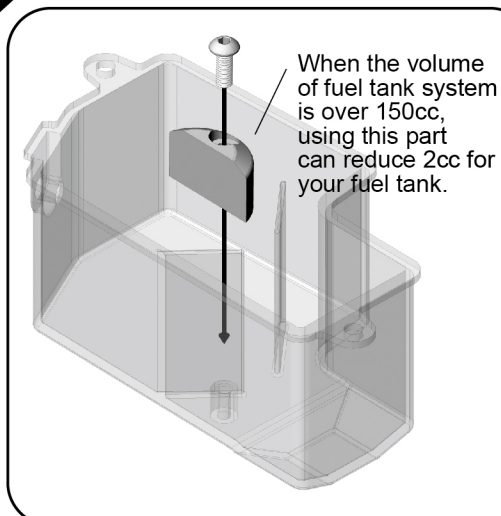


1003

1060

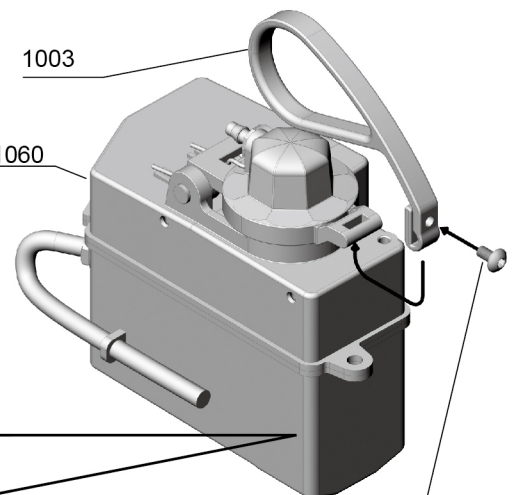

SB02505BK

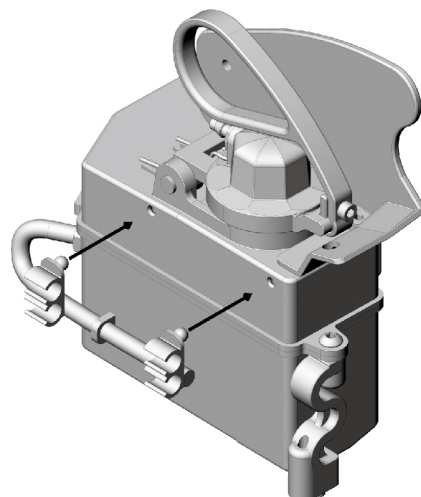


1003

SF0308BK

SB0310BK

SB0310BK

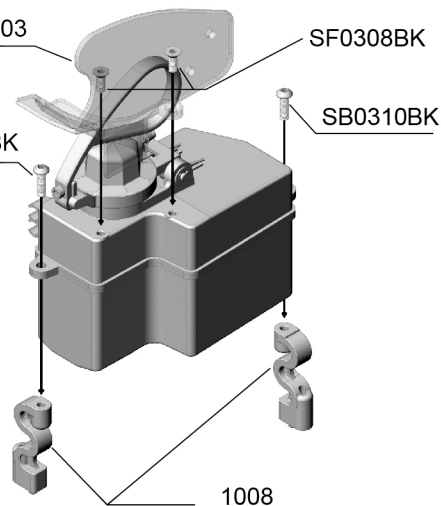


1008

BAG O



SF0310BK
Flat Screw
M3x10mm x 2

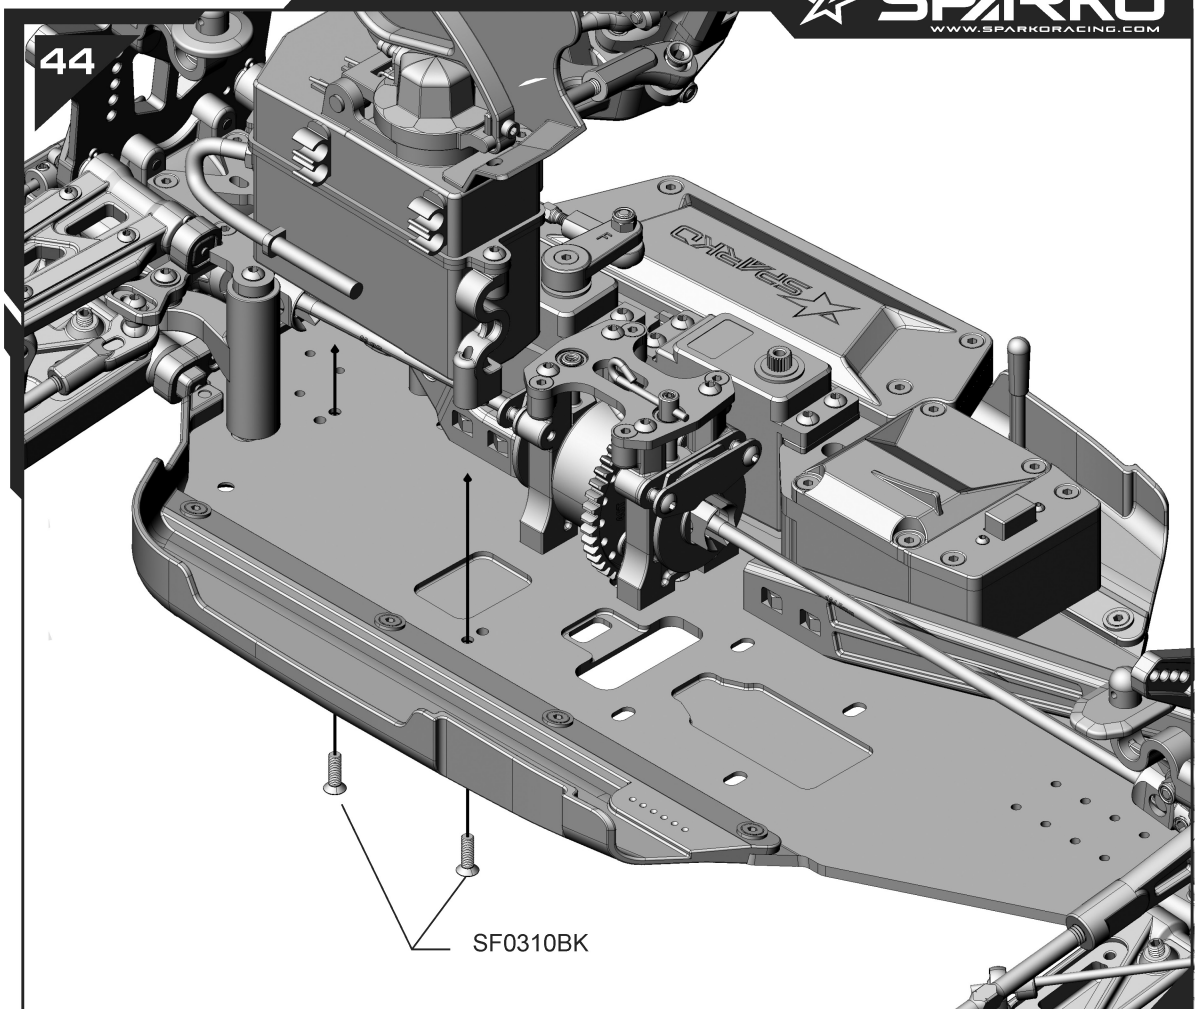


BAG P



SC0312BK
Cap Screw
M3x12mm x 4



WS0305510
Spring Washer
M3x5.5x1mm x 4

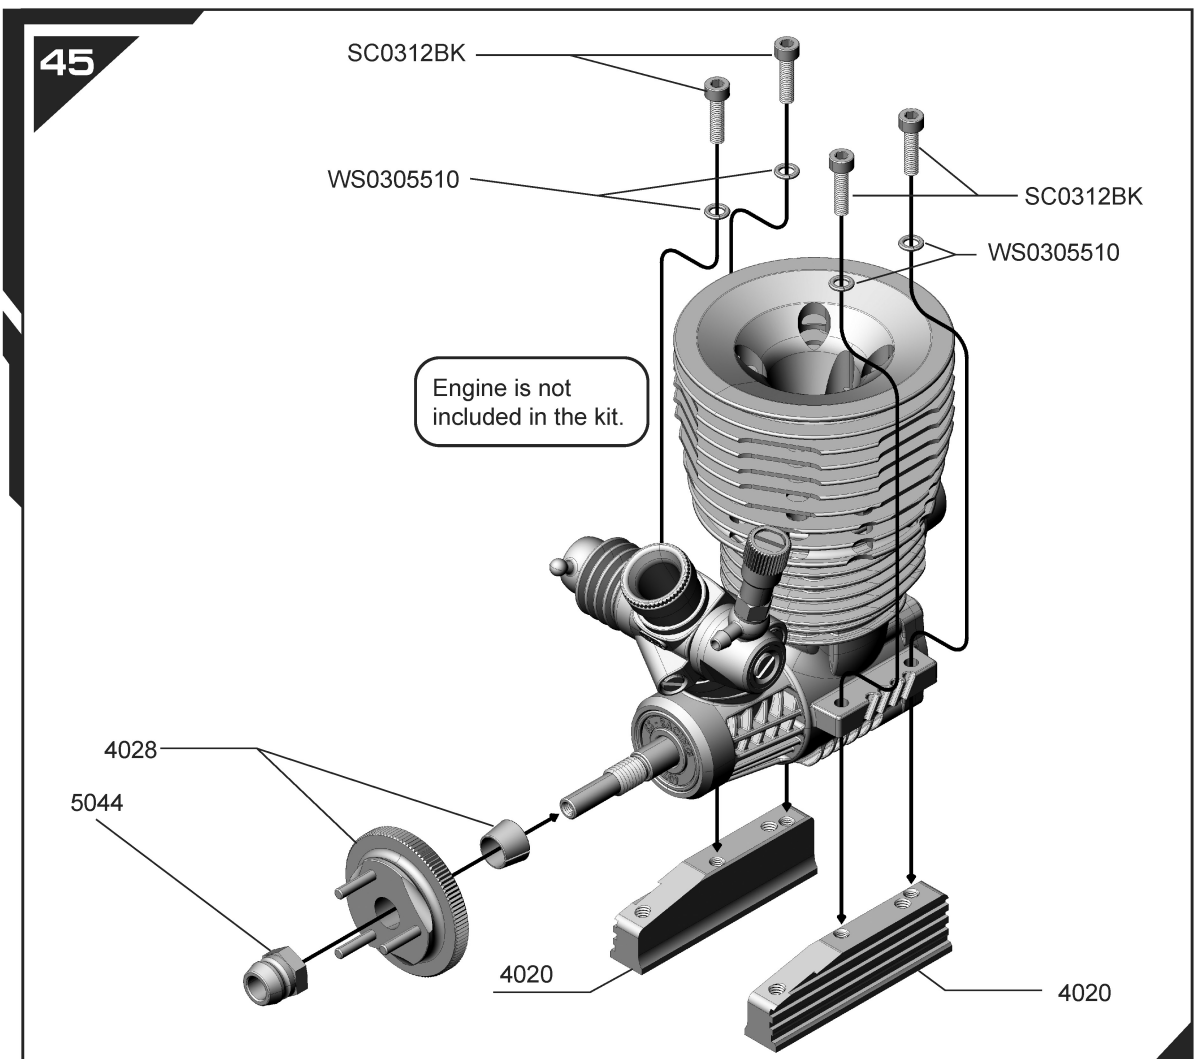

BAG P



SC0308BK
Cap Screw M3x8mm x 1



WO030801
Shim 3x8x1mm x 1



WO050840
Shim 5x8xT0.4mm x 4



WO050880
Shim 5x8xT0.8mm x 1



BO051004
Ball Bearing
5x10x4mm x 2



5045
I-Head Screw Thin
M4x8mm x 4




SS0404BK
Set Screw
M4x4mm x 1




SF0408BK
Flat Screw
M4x8mm x 1


46

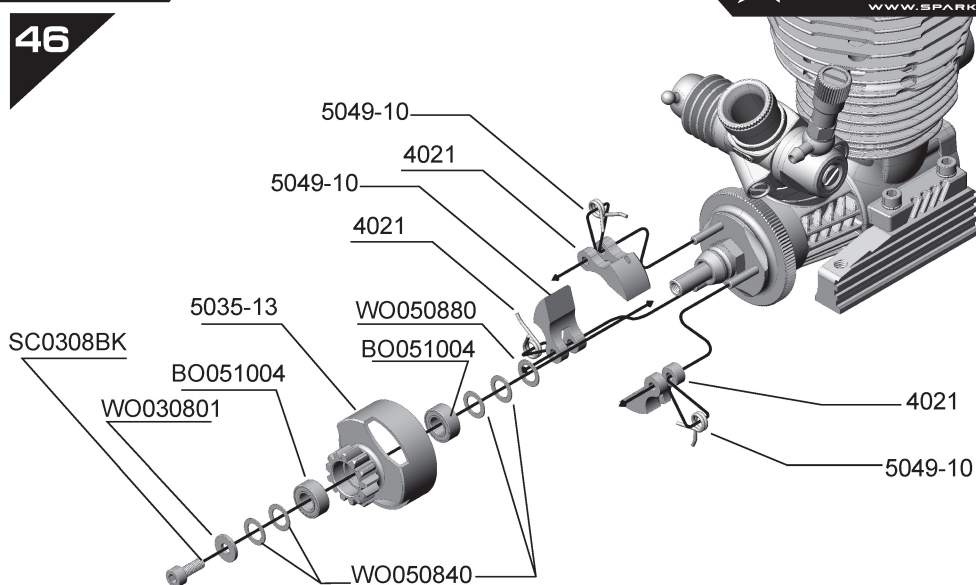

47

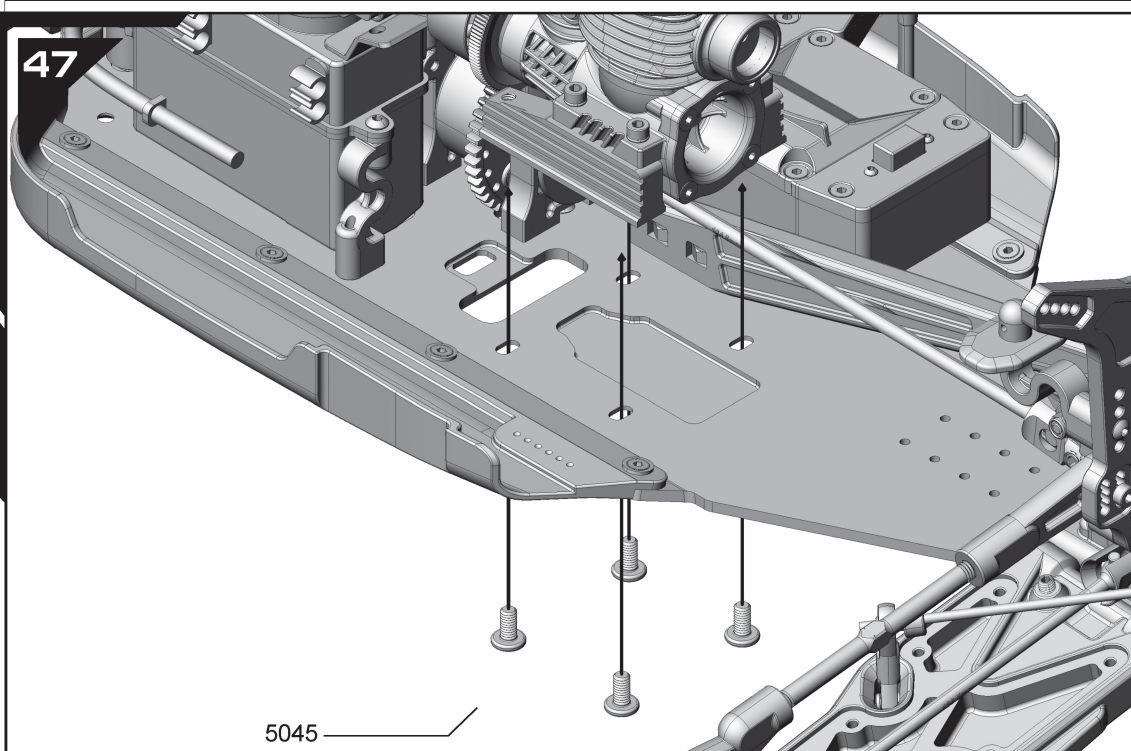

48

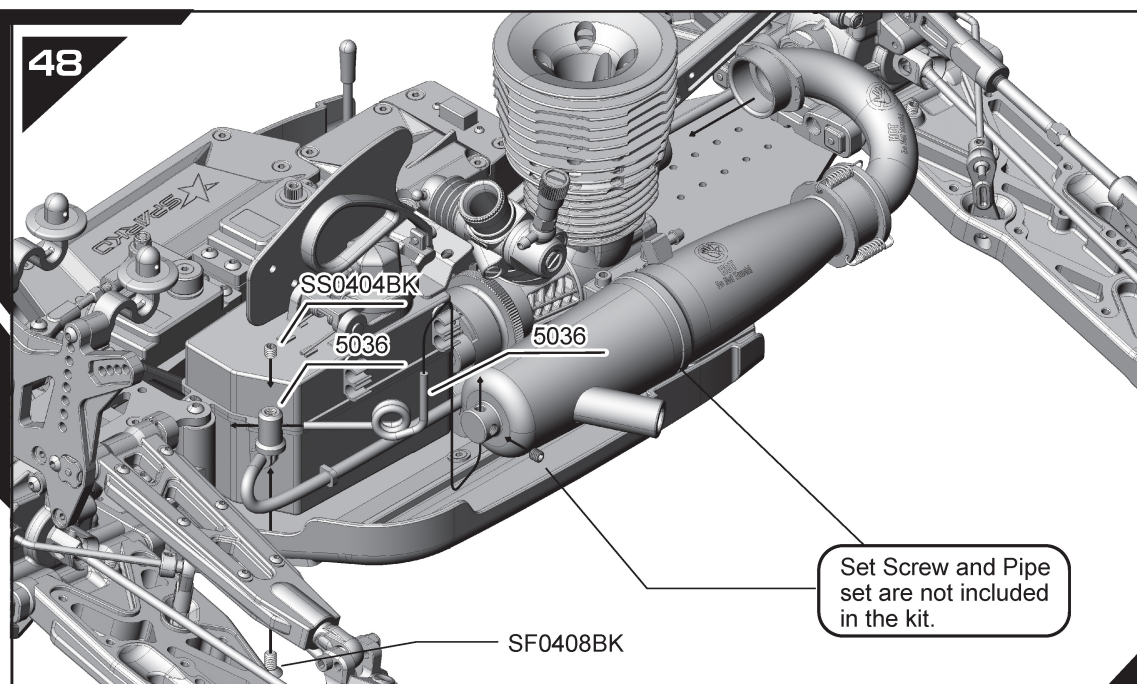

49

 SB02505BK
Ball Screw
M2.5x5mm x 3

 SS0303BK
Set Screw
M3x3mm x 4

 5042
Hex Shanked Button
M3x13.7mm x 1


 0007
Throttle Rod
50mm x 1

 0007
Throttle Rod
60mm x 2

 0007
Brake Adjuster Knob x 2



0007
Throttle Rod Spring x 1

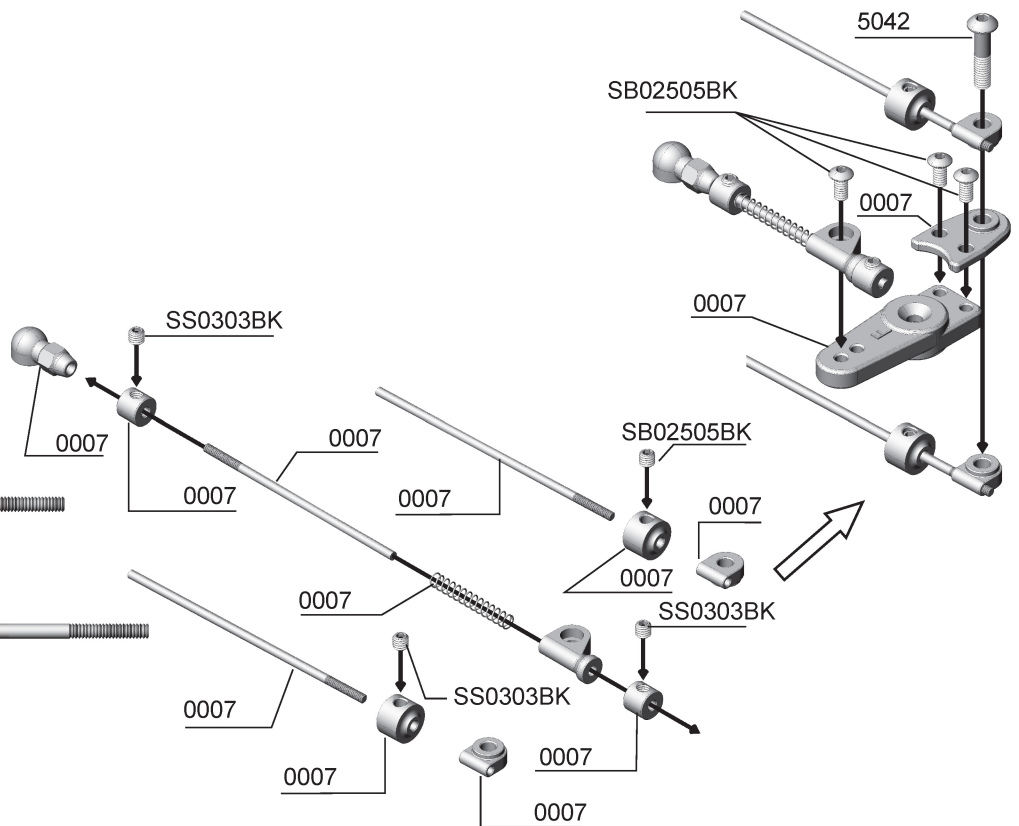


50

 0007
Brake Spring x 2

 SF0308BK
Flat Screw
M3x8mm x 1

 0007
Adjuster Knob x 4

 SS0303BK
Set Screw
M3x3mm x 2

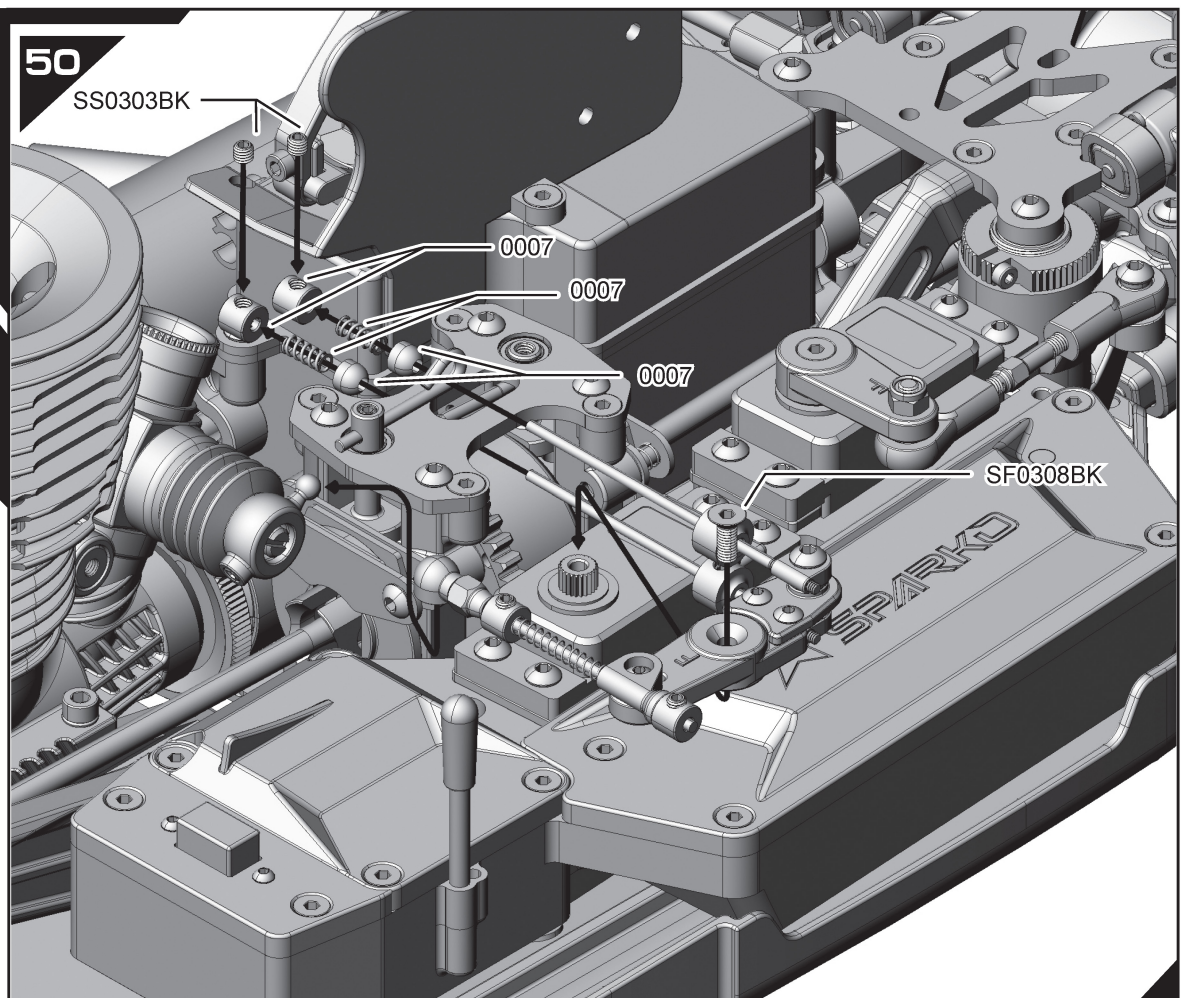

5066
Front Shock Shaft x 2

5067
Rear Shock Shaft x 2

NO025SL
Nut Lock M2.5mm x 4

WO0260660
Shock Piston Washer
2.6x6x0.6mm x 4

1028
Shock Seal Washer
3.6X7X2.5mm x 8


WO0260660
Shock Piston Washer
2.6x6x0.6mm x 4

1028
Shock Seal O-Ring x 8

2003
Shock seal O-Ring x 4

2004
Shock Spring Adjust
Nut O-Ring x4

SF02046BK 1.5 Hex x 4
Flat Screw M2.0x4.6mm

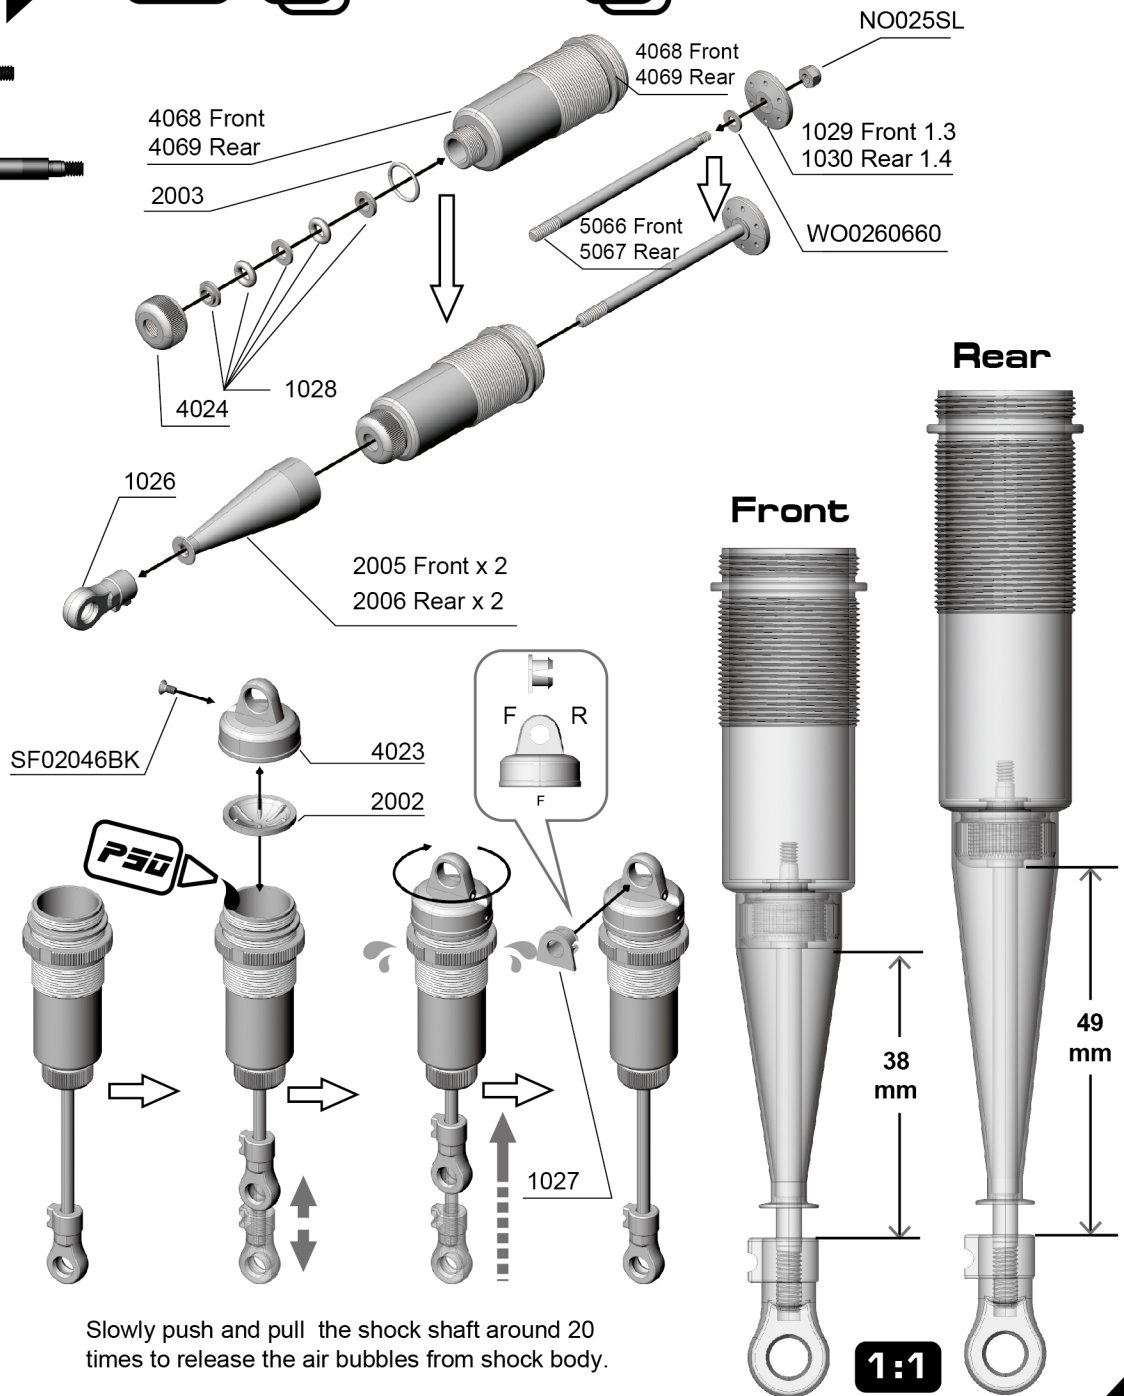

Slowly push and pull the shock shaft around 20 times to release the air bubbles from shock body.


SB02508BK
Ball Screw
M2.5x8mm x 4



5068-H71
Front Shock Spring (Hard)
(L71 X Ø1.4 mm) x 2



5069-M84
Rear Shock Spring (Med)
(L84 X Ø1.5 mm) x 2

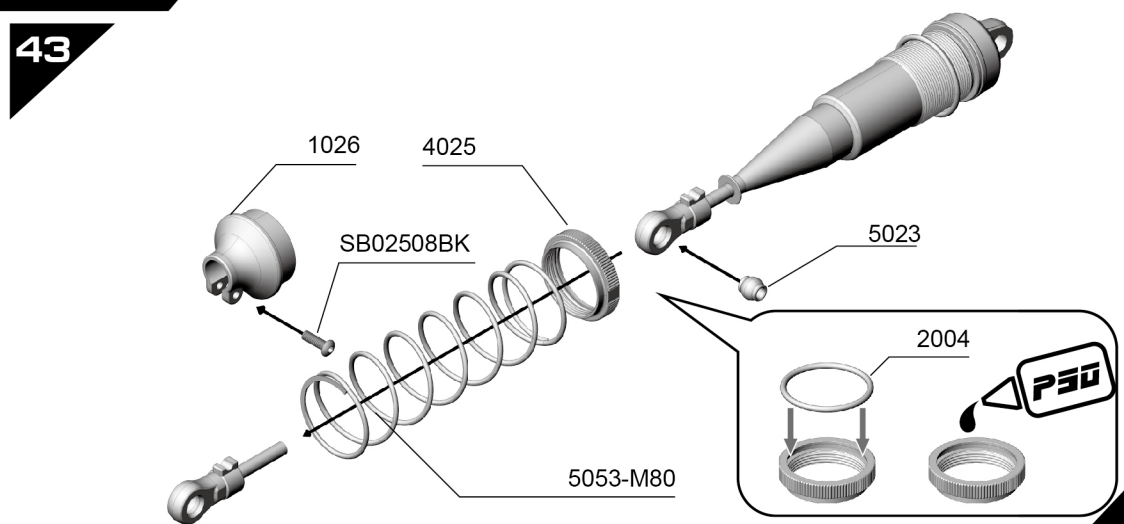

BAG R



SC0328BK
Cap Screw M3x28mm x 4



NF03BK
Flanged Locknut M3 x 4



5019
Shock Pins x 4



SS0404BK
Set Screw M4x4mm x 4

53

4013-1
Offset 1mm

4013-2
Offset 2mm

4022

SC0328BK

4022

SC0328BK

SC0328BK

FRONT

REAR

54

NF03BK

5019

SS0404BK

NF03BK

5019

SS0404BK

NF03BK

5019

SS0404BK

NF03BK


5019

SS0404BK




SF0308BK
Flat Screw M3x8mm x 1

55

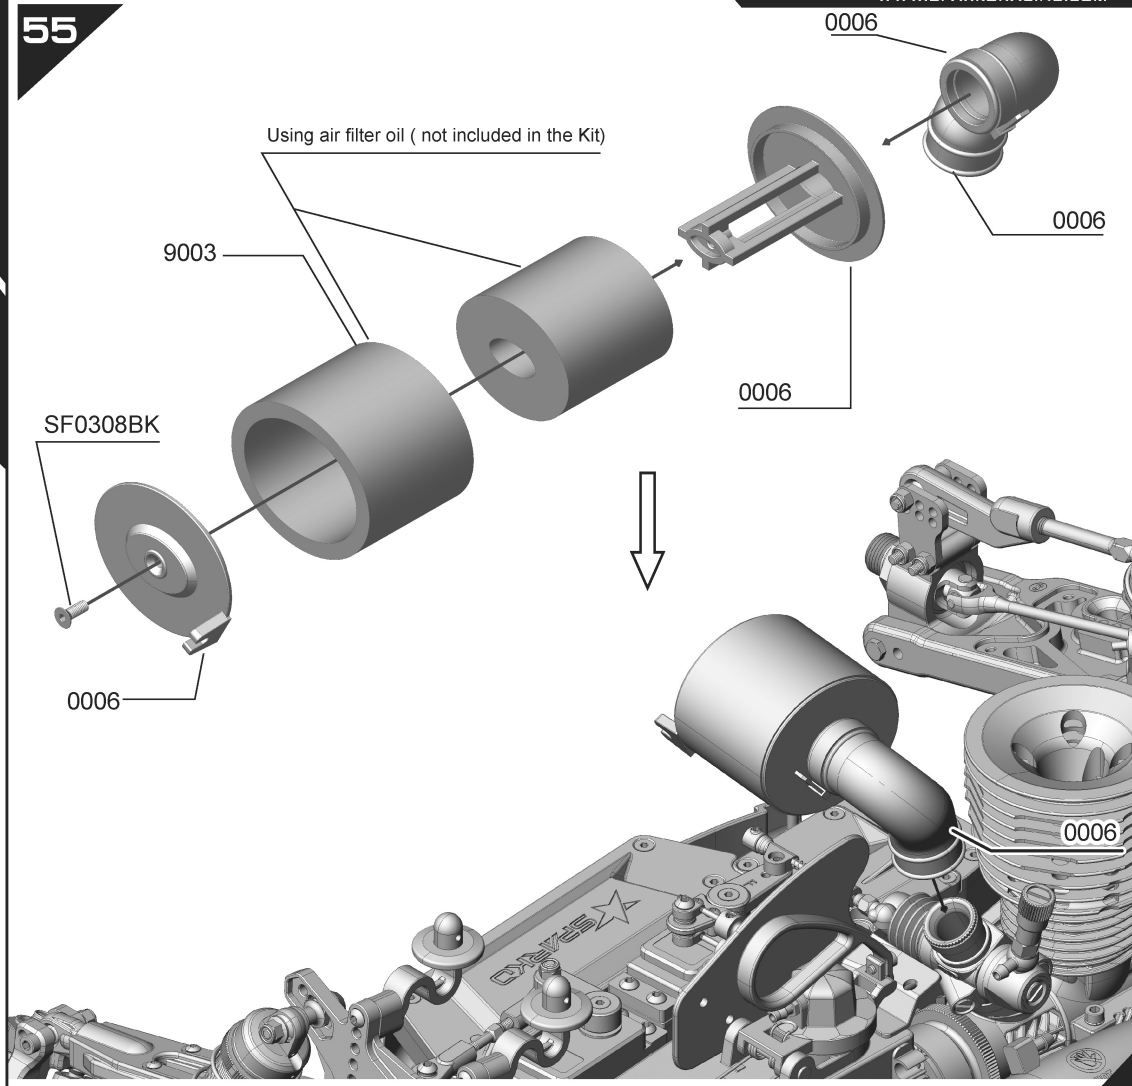

56

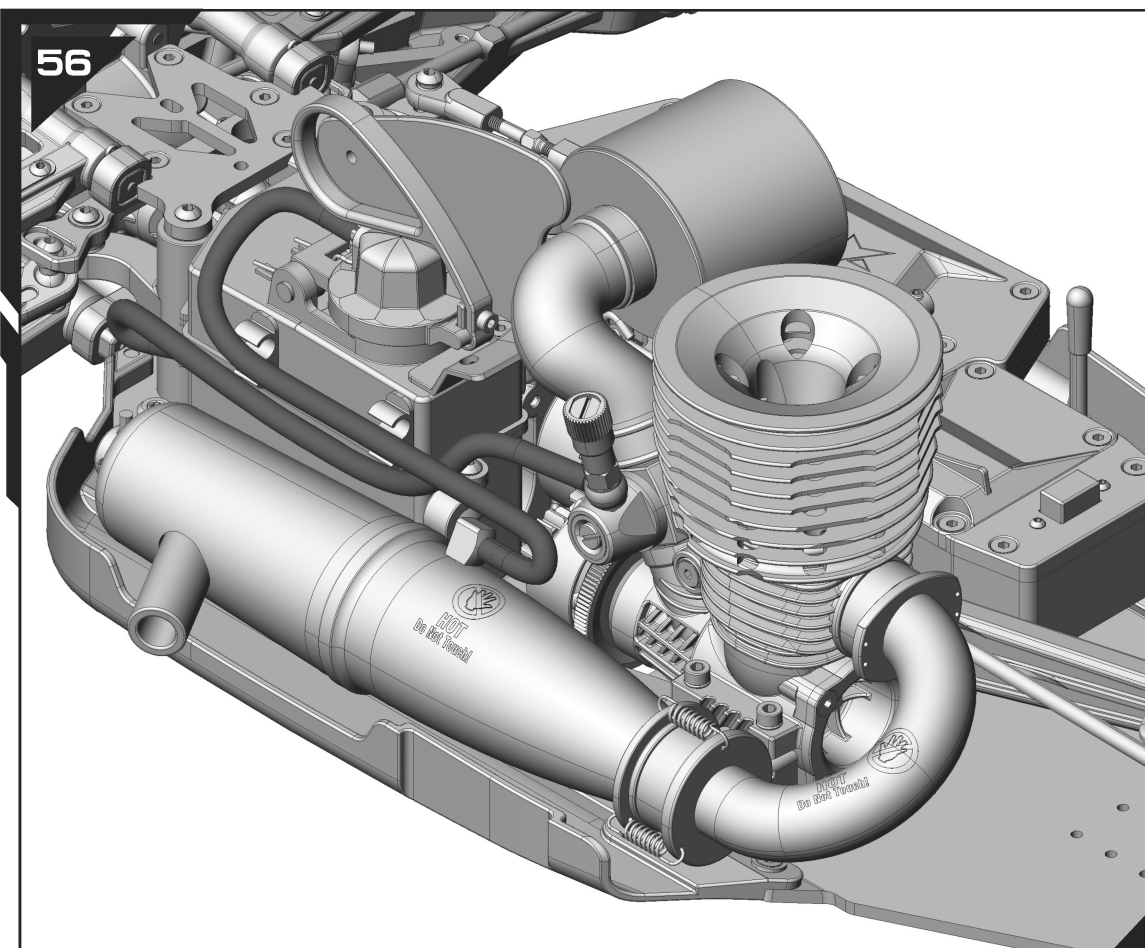





SB02508BK
Ball Screw M2.5x8mm x5



SF0314BK
Flat Screw M3x14mm x 2




NO03BK
Nut Lock M3 x 2

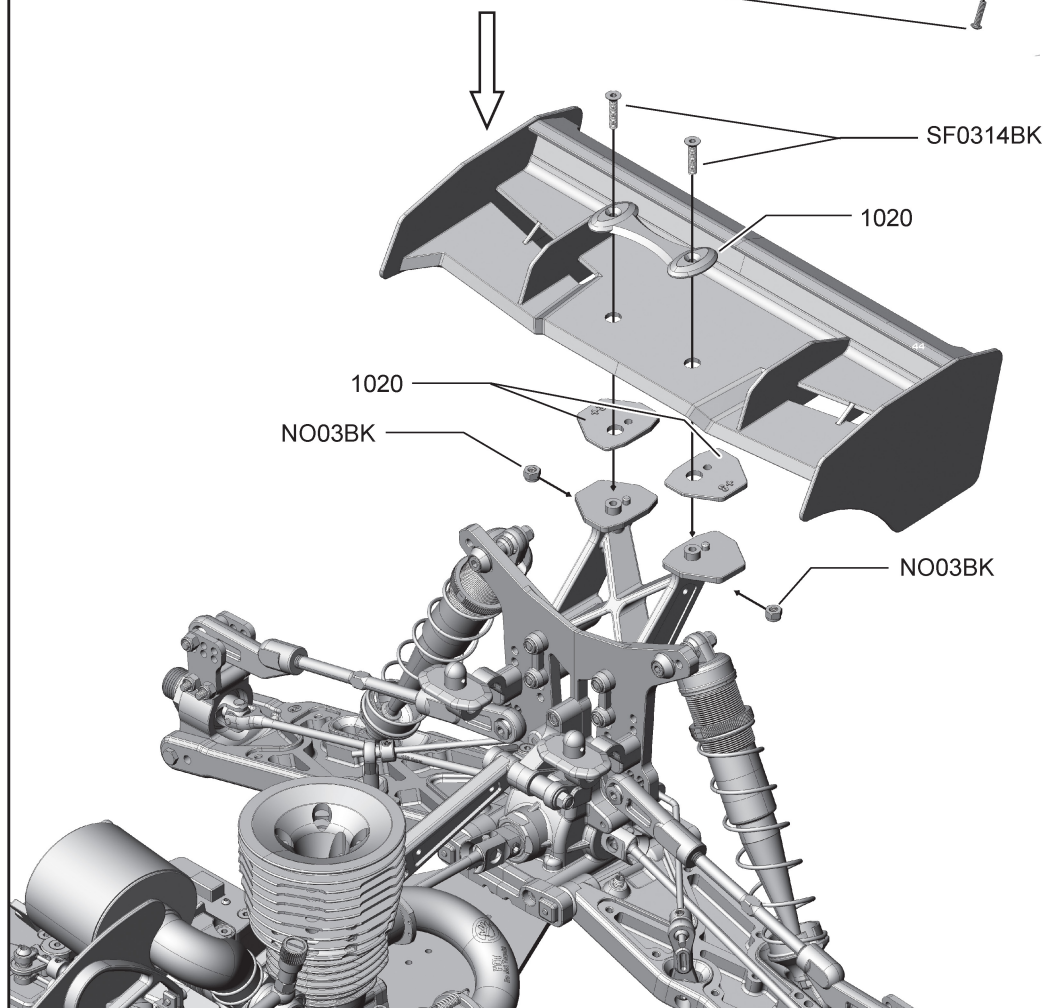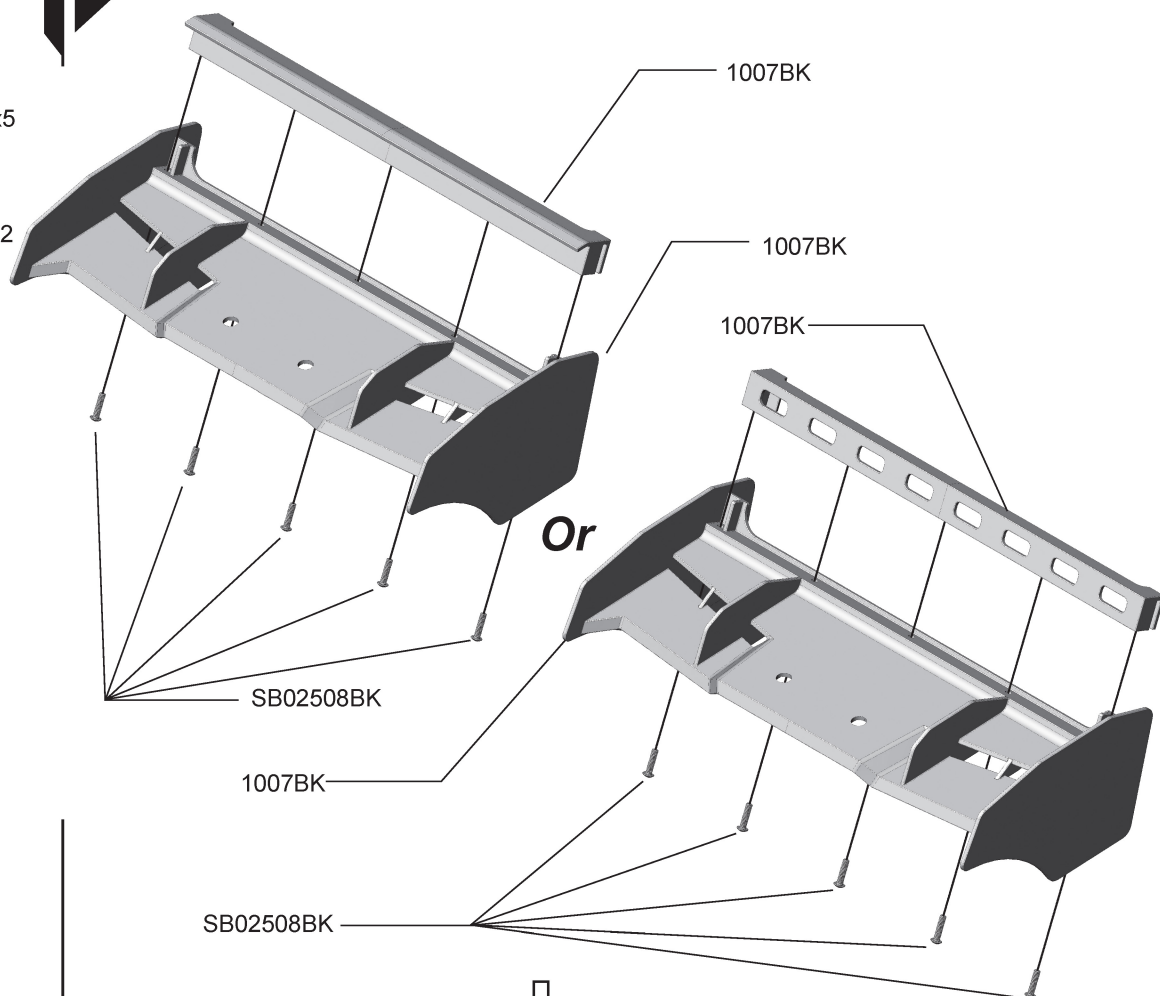



4005
Aluminum Wheel Nut
(Hard Anodizing) x 4

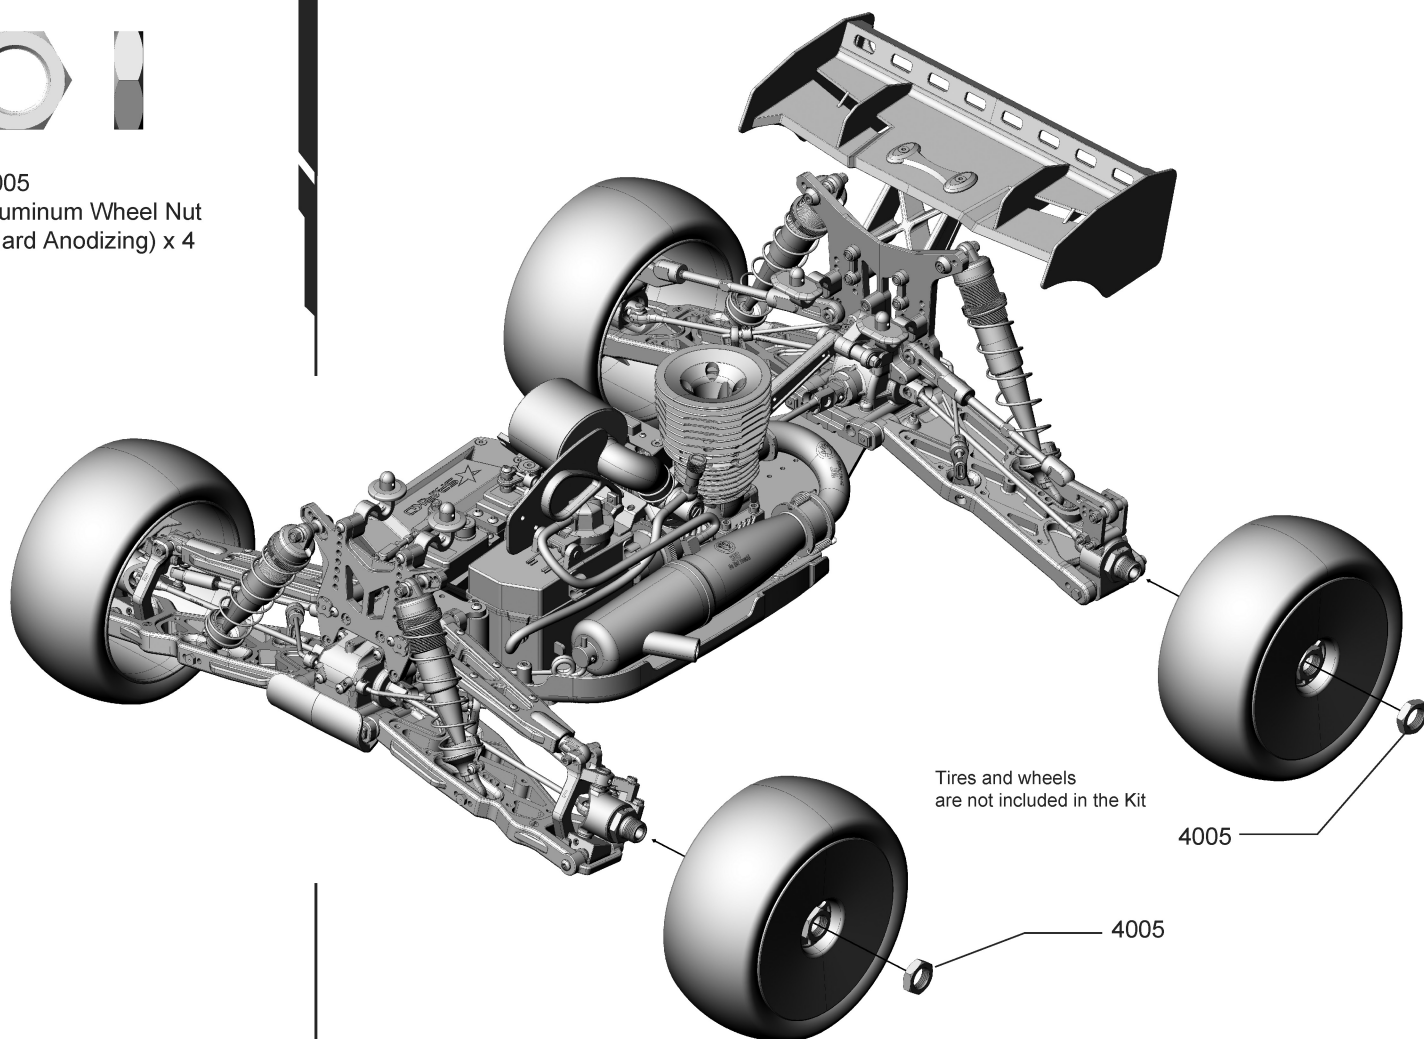

Engine	Plug	Muffler	Clutch Spring	Clutch Shoe	Tire	Tire Insert	Wheel	Body	Fuel
			ϕ ____ x ____		Model : Compounds:				

● Diff Gear Set-Up


	Front	Center	Rear
Diff. Fluid	# 10000 46 x 10 _T	# 10000 47 x 13 _T	# 5000 46 x 10 _T

● Shock Set-Up

Cap ☒ Bladder ☐ Emulsion	Front	Rear
Oil Brand: _____	# 750	# 750
Spring Collar Spacer	10 mm	14 mm
Pistons	ϕ 1.3 x 6	ϕ 1.4 x 6
Spring	H71	M84


● Ride Height

Front	Rear
30 mm	33 mm

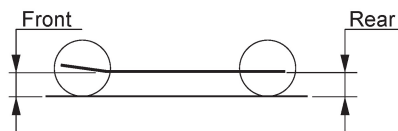

● Rebound

Front	Rear
110 mm	135 mm

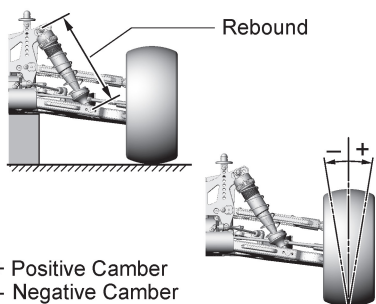

● Camber Angle


Front	Rear
+ 1 °	+ 2 °

+ Positive Camber
- Negative Camber


● Wheelbase _____ mm

● Track Width _____ mm

● Shock Mount Position

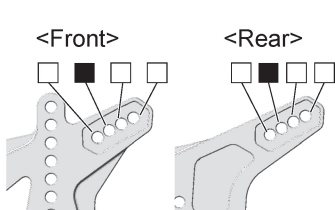

● Rear Upper Arm Position

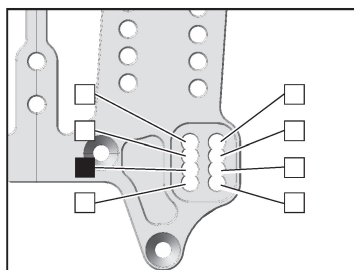



Sus. Arm

Front	☐ In ☒ Mid ☐ Out
Rear	☐ In ☒ Mid ☐ Out

● Rear Hub

☒ Plastic
☐ Aluminum

Hub Carrier Bush
☒ Plastic
☐ _____

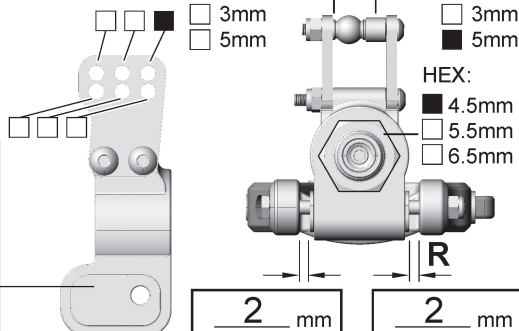

● Arm

Front	Rear
☐ Soft ☒ Hard (Std.) ☐ _____	☐ Soft ☒ Hard (Std.) ☐ _____

● Front Hub Carrier


☒ Plastic ☐ Aluminum
☐ 16° ☒ 17.5° ☐ 20° ☐ ____°

● Front Upper Arm

☒ A Arm ☐ Linkage


● Front Upper Arm Position

⊗ Inside holes are not supported at this time.

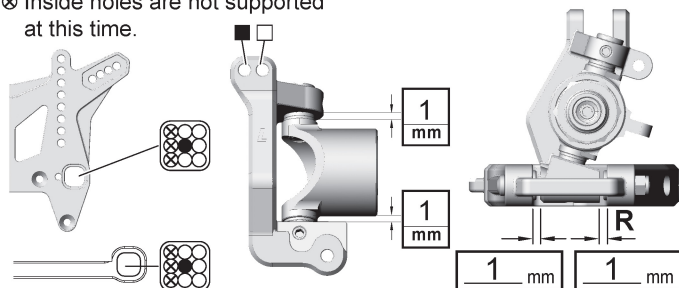

● Toe Angle

Front
+ _____ °
- 1 °

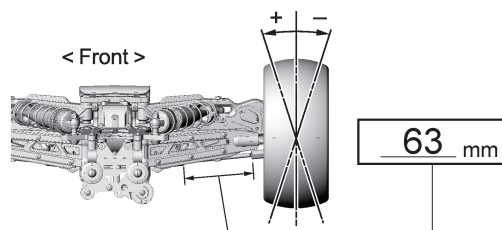


● Front Toe-In Inside holes are not supported at this time.



● Rear Toe-In Inside holes are not supported at this time.




● Steering Plate

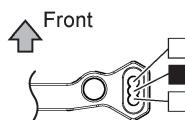


● Sway Bar


Front	Rear
ϕ 2.6mm	ϕ 2.8mm
2 mm	2 mm



● Wing

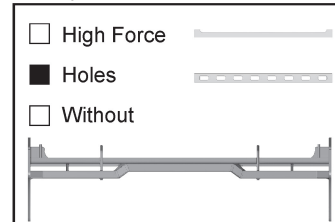

● Wing Position / Angle

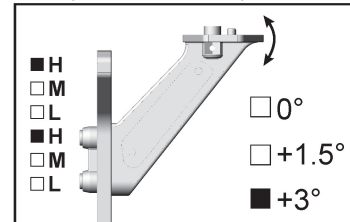

Notes

Date / /

Track

Name of Driver

Size: ☐ Open ☐ Med. ☐ Tight
Traction: ☐ High ☐ Med. ☐ Low
Surface: ☐ Smooth ☐ Med. ☐ Bumpy

Engine	Plug	Muffler	Clutch Spring	Clutch Shoe	Tire	Tire Insert	Wheel	Body	Fuel
			φ ____ x ____		Model : Compounds:				

● Diff Gear Set-Up


	Front	Center	Rear
Diff. Fluid	# ____ x ____ T	# ____ x ____ T	# ____ x ____ T

● Shock Set-Up

Cap ☐ Bladder ☐ Emulsion	Front	Rear
Oil Brand: _____	#	#
Spring Collar Spacer	mm	mm
Pistons	φ ____ x ____	φ ____ x ____
Spring		


● Ride Height

Front	Rear
mm	mm

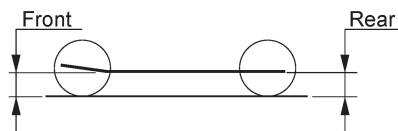

● Rebound

Front	Rear
mm	mm

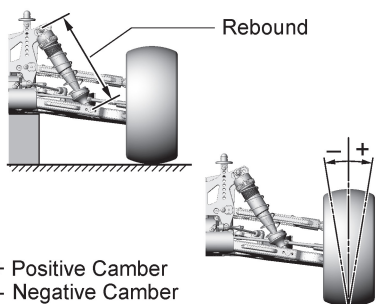

● Camber Angle


Front	Rear
+ ° - °	+ ° - °

+ Positive Camber
- Negative Camber


● Wheelbase _____ mm

● Track Width _____ mm

● Shock Mount Position

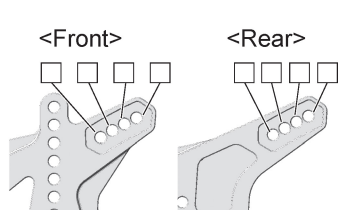

● Rear Upper Arm Position

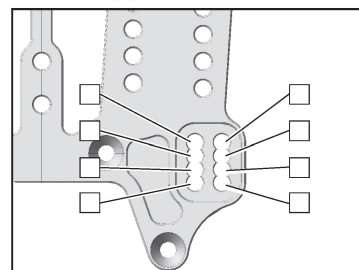


Sus. Arm

Front	☐ In ☐ Mid ☐ Out
Rear	☐ In ☐ Mid ☐ Out

● Rear Hub


☐ Plastic
☐ Aluminum

Hub Carrier Bush
☐ Plastic
☐ _____

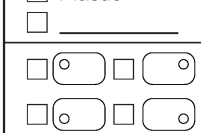

0mm
2mm
3mm
5mm

HEX:
☐ 4.5mm
☐ 5.5mm
☐ 6.5mm

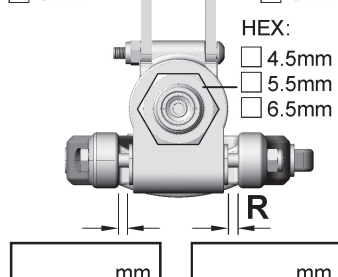

● Arm

Front	Rear
☐ Soft ☐ Hard (Std.) ☐ _____	☐ Soft ☐ Hard (Std.) ☐ _____

● Front Hub Carrier


☐ Plastic ☐ Aluminum
☐ 16° ☐ 17.5° ☐ 20° ☐ ____°

● Front Upper Arm

☒ A Arm ☐ Linkage


● Front Upper Arm Position

⊗ Inside holes are not supported at this time.

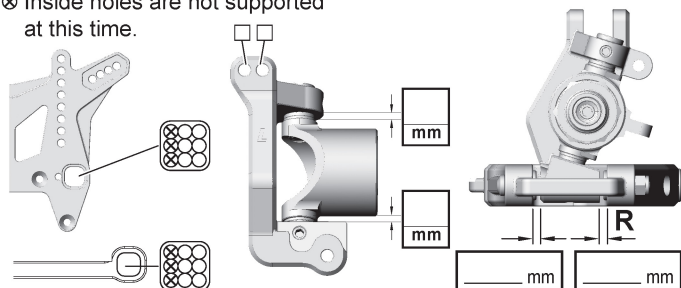

● Toe Angle

Front
+ ° - °

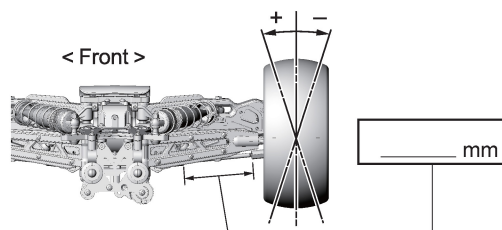


● Front Toe-In Inside holes are not supported at this time.



● Rear Toe-In Inside holes are not supported at this time.




● Steering Plate

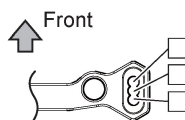


● Sway Bar


Front	Rear
φ mm	φ mm
mm	mm



● Wing

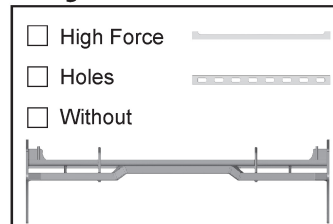

● Wing Position / Angle

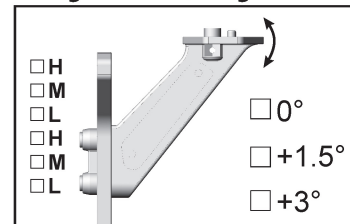

Notes

Date / /

Track

Name of Driver

Size: ☐ Open ☐ Med. ☐ Tight
Traction: ☐ High ☐ Med. ☐ Low
Surface: ☐ Smooth ☐ Med. ☐ Bumpy

Engine	Plug	Muffler	Clutch Spring	Clutch Shoe	Tire	Tire Insert	Wheel	Body	Fuel
			ϕ ____ x ____		Model : Compounds:				

● Diff Gear Set-Up


	Front	Center	Rear
Diff. Fluid	# ____ x ____ T	# ____ x ____ T	# ____ x ____ T

● Shock Set-Up

Cap ☐ Bladder ☐ Emulsion	Front	Rear
Oil Brand: _____	#	#
Spring Collar Spacer	mm	mm
Pistons	ϕ ____ x ____	ϕ ____ x ____
Spring		


● Ride Height

Front	Rear
mm	mm

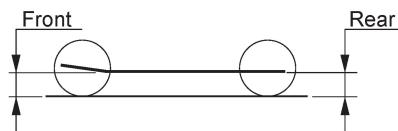

● Rebound

Front	Rear
mm	mm

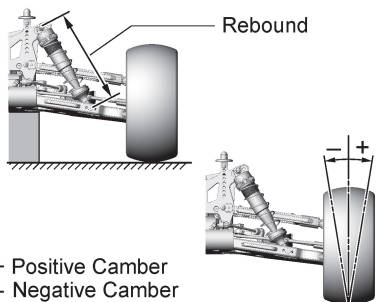

● Camber Angle


Front	Rear
+ ° - °	+ ° - °

+ Positive Camber
- Negative Camber


● Wheelbase _____ mm

● Track Width _____ mm

● Shock Mount Position

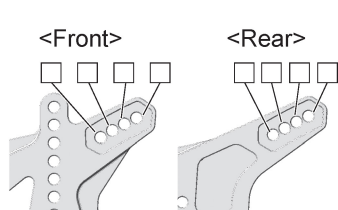

● Rear Upper Arm Position

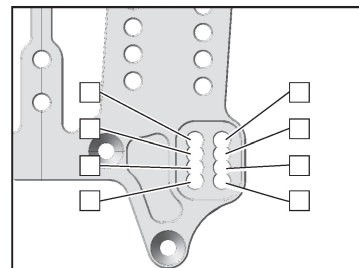


Sus. Arm

Front	☐ In ☐ Mid ☐ Out
Rear	☐ In ☐ Mid ☐ Out

● Rear Hub


☐ Plastic
☐ Aluminum

Hub Carrier Bush
☐ Plastic
☐ _____



0mm
2mm
3mm
5mm

HEX:
4.5mm
5.5mm
6.5mm

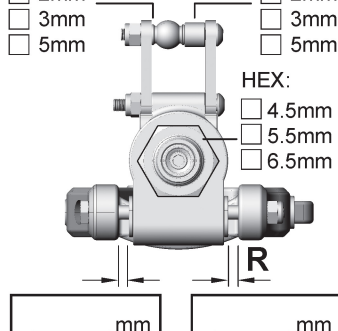

● Arm

Front	Rear
☐ Soft ☐ Hard (Std.) ☐ _____	☐ Soft ☐ Hard (Std.) ☐ _____

● Front Hub Carrier


☐ Plastic	☐ Aluminum
☐ 16°	☐ 17.5° ☐ 20° ☐ ____°

● Front Upper Arm

☒ A Arm ☐ Linkage


● Front Upper Arm Position

⊗ Inside holes are not supported at this time.

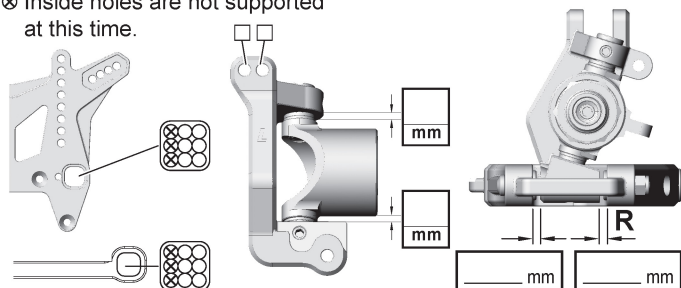

● Toe Angle

Front
+ ° - °

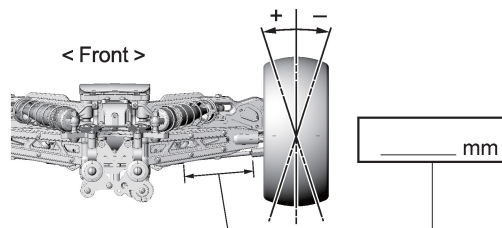


● Front Toe-In Inside holes are not supported at this time.



● Rear Toe-In Inside holes are not supported at this time.




● Steering Plate

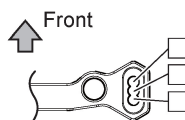

● Sway Bar

Front	Rear
ϕ mm	ϕ mm
mm	mm



● Wing

☐ High Force
☐ Holes
☐ Without

● Wing Position / Angle

☐ H ☐ M ☐ L	☐ 0° ☐ +1.5° ☐ +3°
--	---

Notes

PT No.	ITEM	PT No.	ITEM
F80007	Brake Linkage Set	F84055	7075Aluminum Caster Block (Left & Right)(17.5°)
F81001	Steering Bellcrank Set	F84060	7075Aluminum Arm Mount C +0.5 (Dark Blue)
F81005	Sway Bar Ball End Set (4pcs)	F84062	Aluminum Steering Block 5 Degree Shim
F81007BK	1/8 Wing Black	F84063	F8T 7075Aluminum Chassis (Hard Anodizing)
F81008	Fuel Tank	F84065	F8T 7075Aluminum Front Shock Tower (Dark Blue)
F81009	Plastic Arm Holder Insert Set (2set)	F84066	F8T 7075Aluminum Rear Shock Tower (Dark Blue)
F81010	Plastic steering Shim 1mm (4pcs)	F84068	F8T 7075Aluminum Front Shock Body (Hard Anodizing)(2pcs)
F81011	F/R Gearbox Set	F84069	F8T 7075Aluminum Rear Shock Body (Hard Anodizing)(2pcs)
F81013	Center Diff. Mount Set x2	F85001	Body Clip (10pcs)
F81017	Rear Hubs & Insert Set x2	F85002	Sevro Saver Spring(1pcs)
F81018	Bearing Spacers (4pcs)	F85003	Sevro Saver Shaft(2pcs)
F81019	Rear Upper Arm Linkage Ball End Set x2	F85005	Pin M3.0x16.8mm (4pcs)
F81020	Tall Wing Mount	F85006	Rear Upper Arm Ball Stud (7mm) (4pcs)
F81023	Antenna Tube Set	F85007	Lower Arm Hinge Pin(70mm)(2pcs)
F81024	Receiver Box	F85008	Upper Arm Hinge Pin(43mm)(2pcs)
F81025	Front Steering Linkage Ball End Set x2	F85010	Sway Bar Ball Stud (4pcs)
F81026	Spring Cups & Shock Rod Ends Set x2	F85013	Spindle Carrier Hinge Insert (4pcs)
F81027	Shock Cap Bushings (4pcs)	F85014	Spindle Carrier Hinge Pins (4pcs)
F81028	CNC Delrin Shock Cartridge Set x2	F85015	Differential Outdrive (2pcs)
F81029	Big Bore Tapered Shock Piston 6x1.3mm (2pcs)	F85016	Center Differential Outdrives (2pcs)
F81030	Big Bore Tapered Shock Piston 6x1.4mm (2pcs)	F85017	Front/Rear Differential Outdrives (2pcs)
F81032	Center Differential Case	F85018	Internal Differential Gear Set (4+2pcs)
F81033	Servo Horn Set	F85019	Shock Pins (4pcs)
F81035	Rear Upper Arm Linkage Ball End Short x 4	F85020	Differential Cross Pins (6pcs)
F81039	Sterring servo Ball End (2pcs)	F85021	Pin M2.2x9.8mm (4pcs)
F81043	Side Guards(F8E)	F85022	Sevro Steering Turnbuckle M3x30mm (2pcs)
F81056	F8T Front Upper Suspension Arms Set x2	F85023	Shock Ball Stud 6xL6.7mm (4pcs)
F81057	F8T Front Lower Suspension Arms (Left & Right)	F85024	Brake Pad Set (4pcs)
F81058	F8T Rear Lower Suspension Arms (Left & Right)	F85025	Brake Pad Spring(4pcs)
F81059	F8T Body Mount /Brace Set	F85026	Brake Lever (2pcs)
F82001	Differential O-Rings (6pcs)	F85027	Brake Cam Set
F82002	Shock Bladder (2pcs)	F85028	Brake Rotor Set (2pcs)
F82003	Shock seal O-Rings (4pcs)	F85030	Center Front Dogbone 88mm
F82004	Shock Spring Adjust Nut O-Ring (4pcs)	F85032	Rear Outter Hinge Pins (2pcs)
F82005	Shock Boots Front (4pcs)	F85034	Rear Upper Arm Ball Stud 7.0mm Hex (4pcs)
F82006	Shock Boots Front (4pcs)	F85035-13	Clutch Bell (13T)
F83003-30	Carbon Fiber Front Top Plate 3.0mm	F85036	Exhaust Wire Mount Set
F83004-25	Carbon Fiber Center Diff. Plate 2.5mm	F85038	Steering Turnbuckle Ball Set (4pcs)
F83005-25	Carbon Rear Hub Link 2.5mm (4pcs)	F85042	Hex Shankd Button M3x13.7mm (4pcs)
F83018	F8T Carbon Fiber Steering Knuckle Plate (R=L) 3.0mm (2pcs)	F85043	Down Stop Screw M4x10mm (4pcs)
F83019	F8T Carbon Fiber Front Upper Arm Inserts (R=L) 1.5mm (4pcs)	F85044	1/8 Scale Flywheel Nut
F84001	7075 Aluminum Steering Bellcrank	F85045	I-Head Screw Thin M4x8mm (10pcs)
F84002	7075 Aluminum Steering Plate	F85046-47	Center Gear 47T with Differential Seal
F84003	Aluminum Servo Saver Post (Hard Anodizing)	F85048-10	F8T Pinion Gear10T
F84004	Aluminum Servo Saver Nut with Screw Fixed (Ggrey)	F85049-10	Clutch Spring 1.0mm (3pcs)
F84005	Aluminum Wheel Nut(Hard Anodizing) (4pcs)	F85057	Center Rear Dogbone 164.5mm(F8T)
F84005	Aluminum Wheel Nut(Hard Anodizing) (4pcs)	F85059	Universal Front Cross Drive Shaft Set (133.5mm)
F84006	Aluminum Wheel Hub Axil(L4.5mm)17mm(Hard Anodizing)(2pcs)	F85060	Universal Rear Cross Drive Shaft Set (136.5mm)
F84007	7075 Aluminum Arm Mount A (Dark Blue)	F85061	F8T Steering Turnbuckle M4x86mm (2pcs)
F84008	7075 Aluminum Upper Link Mount (Dark Blue)	F85062	F8T Camber Turnbuckle 5x45mm (2pcs)
F84010	Aluminum Anti-Roll Bar Collet 8mm (4pcs)	F85063	F8T Upper Arm Adjustment Screw(2pcs)
F84011	7075 Aluminum Steering Block	F85066	F8T Front Shock Shaft (2pcs)
F84013	Shock Ball Stud Offset 1mm for Front (2pcs)	F85067	F8T Rear Shock Shaft (2pcs)
F84014	7075Aluminum Arm Mount B(Dark Blue)	F85068-H71	Shock Spring for Front Hard L=71mm(2pcs)
F84016	Pinion Gear Stopper 5x7x5.1mm (4pcs)	F85069-M84	Shock Spring for Rear Medium L=84mm (2pcs)
F84019	7075Aluminum Arm Mount D(Dark Blue)	F85070-23	F8T Front Sway Bar 2.3mm
F84020	7075Aluminum Engine Mount Set	F85070-26	F8T Front Sway Bar 2.6mm
F84021	Aluminum Clutch Shoes & 1.0mm Spring (3pcs)	F85071-25	F8T Rear Sway Bar 2.5mm
F84022	Aluminum Shock Tower Washers (Titanium Color) (4pcs)	F85071-28	F8T Rear Sway Bar 2.8mm
F84023-BG	7075Aluminum Shock Caps (Blue Ggrey) (2pcs)	F85072	Hard Front Lower Suspension Shaft Screw (41.6mm)
F84024-BG	7075Aluminum Shock Body Seal Retainer (Blue Ggrey) (2pcs)	F89001	Servo Spring Dusty Protect Sponge (2pcs)
F84025	7075Aluminum Spring Collars (2pcs)	F89002	Differential Seals Set (2+1)
F84028	1/8 Scale Flywheel	F89003	Air Filter Foam (9pcs)
F84039	Rear Hubs adjust washer 2mm	F89005-BK	Wing Sticker-Black and White

PT No.	ITEM
F80006	Air Filter Set
NF03BK	Flanged Locknut M3 (10pcs)
NO025SL	Nut Lock M2.5mm (10pcs)
NO03BK	Nut Lock M3 (10pcs)
NO03TBK	Nut Lock M3T (10pcs)
NO04BK	Nut Lock M4 (10pcs)
SB02505	Ball Screw M2.5x5mm (10pcs)
SB02505BK	Ball Screw M2.5x5mm (10pcs)
SB02508BK	Ball Screw M2.5x8mm (10pcs)
SB0305BK	Ball Screw M3x5mm (10pcs)
SB0306BK	Ball Screw M3x6mm (10pcs)
SB0308BK	Cap Screw M3x8mm (10pcs)
SB0310	Ball Screw M3x10mm (10pcs)
SB0310BK	Ball Screw M3x10mm (10pcs)
SB0312BK	Ball Screw M3x12mm (10pcs)
SB0314BK	Ball Screw M3x14mm (10pcs)
SB0316BK	Ball Screw M3x16mm (10pcs)
SB0320BK	Ball Screw M3x20mm (10pcs)
SB0323BK	Cap Screw M3x23mm (10pcs)
SB0325BK	Ball Screw M3x25mm (10pcs)
SC0206BK	Cap Screw M2x6mm (10pcs)
SC03012BK	Cap Screw M3x12mm (10pcs)
SC0308BK	Cap Screw M3x8mm (10pcs)
SC0310BK	Cap Screw M3x10mm (10pcs)
SC0316BK	Cap Screw M3x16mm (10pcs)
SC0328BK	Cap Screw M3x28mm (10pcs)
SF02046	Flat Screw M2.0x4.6mm 1.5 Hex (10pcs)
SF0306BK	Flat Screw M3x6mm (10pcs)
SF0308BK	Flat Screw M3x8mm (10pcs)
SF0310BK	Flat Screw M3x10mm (10pcs)
SF0312BK	Flat Screw M3x12mm (10pcs)
SF0314BK	Flat Screw M3x14mm (10pcs)
SF0335BK	Flat Screw M3x35mm (10pcs)
SF0408BK	Flat Screw M4x8mm (10pcs)
SF0410BK	Flat Screw M4x10mm (10pcs)
SF0412BK	Flat Screw M4x12mm (10pcs)
SF0416BK	Flat Screw M4x16mm (10pcs)
SS0303BK	Set Screw M3x3mm Set (10pcs)
SS0304BK	Set Screw M3x4mm Set (10pcs)
SS0504BK	Set Screw M5x4mm Set (10pcs)
WO0260660	Shock Piston Washer 2.6x6x0.6mm (10pcs)
WO030510	Shim 3x5x0.1mm (10pcs)
WO030801	Shim 3x8x1mm (10pcs)
WO0351020	Differential Shim 3.5x10x0.2mm (12pcs)
WO050840	Shim 5x8xT0.4mm (10pcs)
WO050880	Shim 5x8xT0.8mm Shim (10pcs)
WO051230	Differential Shim 5x12x0.3mm (6pcs)
WO060830	Shim 6x8x0.3mm (10pcs)
WO081020	Hex Shim 8x10x0.2mm (10pcs)
WO131620	Differential Shim 13x16x0.2mm (10pcs)
WS0305510	Spring Washer M3x5.5x1mm
BF030625	Ball Bearing 6x10x3mm (4pcs)
BO050825	Ball Bearing 5x8x2.5mm (4pcs)
BO051004	Ball Bearing 5x10x4mm (4pcs)
BO061003	Ball Bearing 6x10x3mm (4pcs)
BO081605	Ball Bearing 8x16x5mm (4pcs)

EXOT

FORMULA EIGHT TRUSSES



SPARKO

WWW.SPARKORACING.COM